

## OPTIONAL -PT1 1-1/4" O.D. P-TRAP

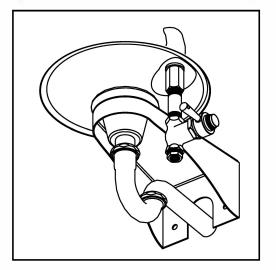

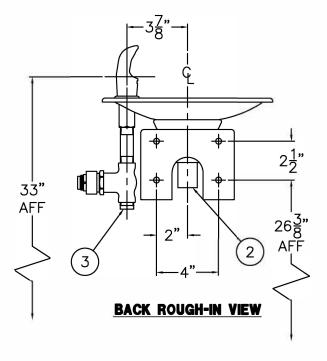

E- SECURELY ANCHOR FIXTURE (4) TO WALL THRU MOUNTING HOLES (1) WITH ANCHORING HARDWARE BY OTHERS.

G-MAKE-UP 1-1/4" O.D. WASTE CONNECTION TO TAILPIECE (2).

H- FLUSH WATER SUPPLY (3) BY OTHERS OF ALL DEBRIS PRIOR

I- CONNECT THE WATER SUPPLY (3) BY OTHERS TO 3/8" NPT FEMALE INLET. STOP ON THE SUPPLY IS RECOMMENDED.


TO CONNECTING TO FIXTURE.


INSTALLATION INSTRUCTIONS:

TITLE


- A- STRUCTURALLY REINFORCE THE WALL BEHIND THE FOUR 3/8" DIAMETER MOUNTING HOLES (1) AT THE DIMENSIONS SHOWN AND INSTALL WALL ANCHORS BY OTHERS.
- B- ROUGH-IN WASTE OUTLET FOR THE 1-1/4" OUTER DIAMETER PLAIN END TAILPIECE (2).
- C- ROUGH-IN WATER SUPPLY (3) AT DIMENSION SHOWN FOR 3/8" NPT FEMALE LEVER VALVE SUPPLY INLET. RECOMMENDED UNION AND SHUTOFF VALVE TO BE SUPPLIED BY OTHERS.
- D- CAREFULLY REMOVE FIXTURE (4) AND COMPONENTS FROM THE PACKAGING PREVENTING SCRATCHING AND DAMAGE.

ROUND BOWL WALL MO	IOUNTED DRINKING FOUNTAIN			
			DRAWING NUMBER	
	JANUARY 2006	10-21-08		
	TO PRESENT	DATE REVISED 05/20/16	9938-250-0M1	

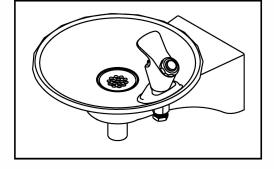

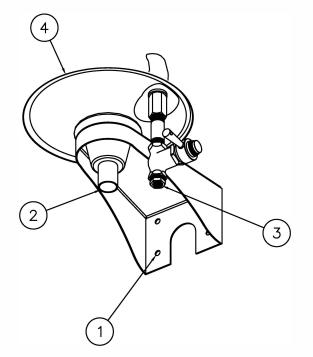

## CONTEMPORARY DRINKING FOUNTAIN

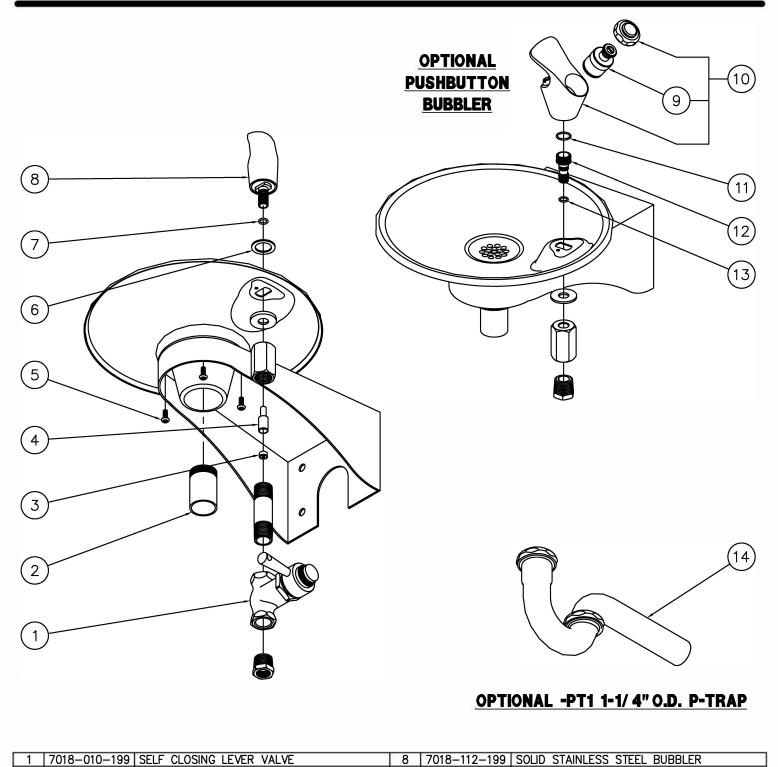

9

10

11

12

**ROUND BOWL WALL MOUNTED DRINKING FOUNTAIN** 

4952-002-000 1-1/4" OUTER DIAMETER TAILPIECE

0112-056-000 CENTER REJECT ALLEN BUTTON HEAD SCREW

TITLE

DESCRIPTION

MANUFACTURE DATE

**JANUARY 2006** 

**TO PRESENT** 

7018-008-199 FLOW REGULATOR ADAPTER

0471-010-000 FLOW REGULATOR

7000-007-000 BUBBLER GASKET

0404-011-000 O-RING

ITEM PART NUMBER

2

3

4

5

6

7

2990-013-002 DECK MOUNTED SST PUSHBUTTON BUBBLER

14 4953-002-000 1-1/4" x 1-1/4" OUTER DIAMETER P-TRAP

7000-060-000 VALVE CARTRIDGE

7018-011-199 BUBBLER ADAPTER

05/20/16

0404-015-000 0-RING

13 0404-011-000 0-RING

DATE ISSUED

DATE REVISED

ITEM PART NUMBER

DESCRIPTION

٦


## LEVER VALVE DRINKING FOUNTAIN

CONDITION:	SOLUTION:
NO WATER FLOW	1.1 Check water main supply — open.
	1.2 Inspect stop (by others) - open & no debris.
	1.3 Inspect strainer (by others) for debris — clean.
	1.4 Inspect flow regulator for debris — clean or replace.
	1.5 Replace lever valve.
WATER DRIPS / WILL NOT SHUT OFF:	2.1 Inspect lever valve for debris — clean.
S. S.	2.2 Replace lever valve.
REDUCED WATER FLOW	3.1 Check water main supply for 20 psig minimum flow pressure.
	3.2 Inspect stop (by others) - open & no debris.
	3.3 Inspect strainer (by others) for debris — clean.
	3.4 Inspect bubbler for debris — clean.
	3.5 Inspect flow regulator for debris — clean or replace.
	3.6 Replace lever valve.

Refer to drawing #9940-206-0M1 for Lever Valve Maintenance Detail to locate solutions above.

UFACTURE DATE	DATE ISSUED	DRAWNG NUMBER
JANUARY 2006	10/21/08	
TO PRESENT	DATE REVISED	9940-205-0 <b>M</b> 1

Τ

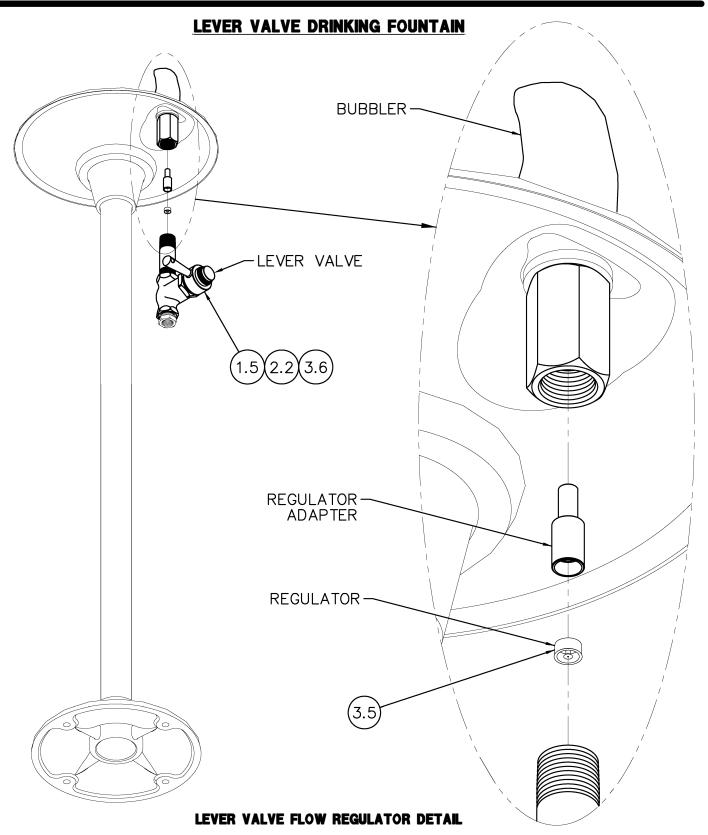

Refer to drawing #9940-205-0M1 for Valve Maintenance Instructions numbered solutions detailed above.

LEVER VALVE MAINTE	LEVER VALVE MAINTENANCE INSTRUCTIONS				
	DATE ISSUED	DRAWING NUMBER			
JANUARY 2006	10/21/08				
TO PRESENT	DATE REVISED	9940-206-0 <b>M</b> 1			