


BASE ROUGH-IN VIEW

INSTALLATION INSTRUCTIONS:

- A- PROVIDE 30" SQUARE MINIMUM \times 6" DEEP MINIMUM CONCRETE SLAB BY OTHERS TO SECURELY ANCHOR FIXTURE. INSTALL THE FOUR PROVIDED CONCRETE ANCHORS (1) AT DIMENSIONS SHOWN TO MATCH HOLES (2) IN FIXTURE BASE.
- B- ROUGH-IN WASTE OUTLET (3) AT DIMENSION SHOWN FOR 1-1/4" OUTER DIAMETER PLAIN END TAILPIECE (4).
- C- ROUGH-IN WATER SUPPLY (5) WITHIN THE BOTTOM OPENING FOR CONNECTION TO VALVE USING SUPPLIED 6" LONG FLEX HOSE WITH 1/2" NPS FEMALE END WHICH WILL ACCOMODATE 1/2" NPT MALE ADAPTER.
- D- CAREFULLY REMOVE FIXTURE (6) AND COMPONENTS FROM THE PACKAGING PREVENTING SCRATCHING AND DAMAGE.
- E- REMOVE THE BACK ACCESS PANEL (7). ENSURE PUSHBUTTON, WASTE TAILPIECE (4) AND BUBBLER (8) ARE SECURE AND CHECK ALL TUBING CONNECTIONS TO MAKE SURE THEY DID NOT COME LOOSE IN SHIPMENT.

- F- SET FIXTURE IN PLACE ALIGNING BASE HOLES (2) WITH THE INSTALLED ANCHORS (1) AND SECURE WITH THE 1/2" UNCHARDWARE (9) PROVIDED.
- G- MAKE-UP 1-1/4" O.D. WASTE CONNECTION TO TAILPIECE (4).
- H- INSTALL AIR-CONTROL VALVE WITHIN PEDESTAL USING THE HARDWARE PROVIDED. CONNECT 1/4" O.D. TUBING COMING FROM 1/4 TURN VALVE AND 1/8" O.D. TUBING FROM PUSHBUTTON TO VALVE. NOTE: ONLY HANDTIGHTEN FERRULE NUTS.
- I- FLUSH WATER SUPPLY (5) BY OTHERS OF ALL DEBRIS PRIOR TO CONNECTING TO VALVE.
- J- CONNECT WATER SUPPLY (5) BY OTHERS TO VALVE USING SUPPLIED 1/2" NPS FLEX HOSE.
- K- TEST OPERATION OF BUBBLER BY DEPRESSING PUSHBUTTON. ADJUST FLOW RATE AS REQUIRED USING IN-LINE 1/4 TURN VALVE. CHECK ALL CONNECTIONS AND WASTE PIPING FOR LEAKS. CORRECT IF PRESENT.
- L- RE-INSTALL BACK ACCESS PANEL (7).

37	SQUARE OUTDOOR STONE PEDESTAL DRINKING FOUNTAIN		
		DATE ISSUED	DRAWING NUMBER
	OCTOBER 2005	09/27/05	
	TO PRESENT	DATE REVISED	9938-215-001
197		03/31/16	

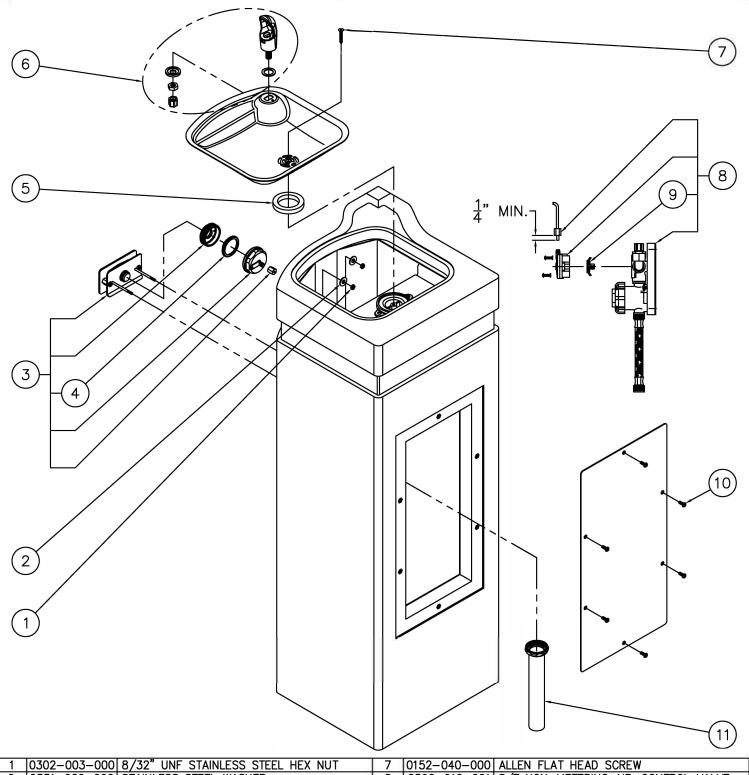

	JANUARY 2006		11/16	R/05		
MANUFACTURE DATE			DATE ISSUED	DRAWING NUMBER		
SQUARE OUTDOOR STONE PEDESTAL DRINKING FOUNTAIN						
inne inne						
ITEM	PART NUMBER			PART NUMBER	DESCRIPTION	
6	7000-012-001	STAINLESS STEEL BUBBLER				
5	7000-006-000	FLAT DRAIN ADAPTER GASKET	11	7000-019-001	1-1/4" OUTER DIAMETER TAILPIECE	
		PUSHBUTTON DIAPHRAGM			CENTER REJECT ALLEN BUTTON HD SCREW	
3	7031-160-001	STONE FOUNTAIN PUSHBUTTON ASSEMBLY	9	2563-010-001	WATER DIAPHRAGM ASSEMBLY	
2	0331-020-000	STAINLESS STEEL WASHER	8	2590-610-001	S/T NON-METERING AIR-CONTROL VALVE	
1	0302-003-000	8/32" UNF STAINLESS STEEL HEX NUT	7	0152-040-000	ALLEN FLAT HEAD SCREW	

JANUARY 2006 To present 11/16/05

DATE REVISED
03/31/16


9938-215-500

PUSH PAD / PUSH BUTTON FRU FREEZE RESISTANT DRINKING FOUNTAINS NON-METERING AIR-CONTROLLED VALVE - (DIRECT ACTING)

CONDITION:

SOLUTION:

NO WATER FLOW:

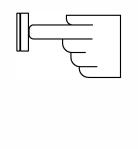


- 1.1 Check water main supply open.
- 1.2 Inspect checkstops open.
- 1.3 Inspect checkstop strainer for debris clean.
- 1.4 Check 1/8" O.D. tubing and fittings for leaks.
- 1.5 Check pushbutton air diaphragm for holes.
- 1.6 Check servomotor diaphragm center hole for blockage.

WATER DRIPS / WILL NOT SHUT OFF:




- 2.1 Check servomotor diaphragm offset hole for debris.
- 2.2 Check servomotor seat for build-up or damage.
- 2.3 Check servomotor seat o-ring for damage.
- 2.4 Check servomotor plate and diaphragm for obstruction.

REDUCED WATER FLOW:

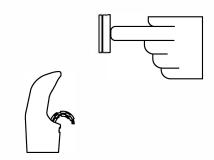

- 3.1 Check water main supply for 20 psig minimum flow pressure.
- 3.2 Check valve riser tubing for crimping.
- 3.3 Inspect checkstop strainer for debris clean.
- 3.4 Check valve flow control for blockage clean.
- 3.5 Inspect bubbler for debris clean.

PREMATURE WATER SHUTOFF:

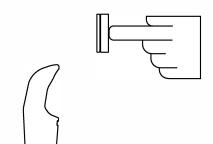


- 4.1 Check 1/8" O.D. tubing and fittings for leaks.
- 4.2 Check pushbutton air diaphragm for holes.

Refer to Air—Controlled Valve Maintenance Detail on drawing # 9940—203—001 for —FRA_ Above Ground units and on drawing # 9940—204—001 for Stone & —FRU_ Below Ground units to locate solutions above.

5	FRU FREEZE RESISTANT FOUNTAIN VALVE MAINTENANCE INSTRUCTIONS		
	MANUFACTURE DATE	DATE ISSUED	DRAWING NUMBER
	JANUARY 2006	10/20/05	
	TO PRESENT	DATE REVISED	9940-202-001
		03/15/16	

PUSH PAD / PUSH BUTTON BELOW GROUND FREEZE RESISTANT DRINKING FOUNTAINS NON-METERING AIR-CONTROLLED VALVE - (DIRECT ACTING)

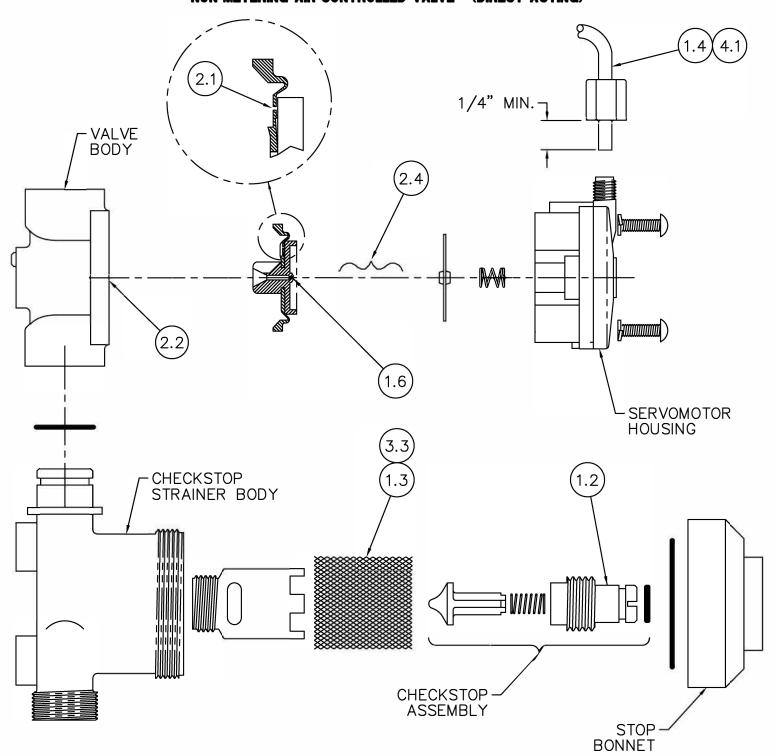

CHECKSTOP STRAINER - SERVOMOTOR DETAIL

Refer to drawing #9940-202-001 for Valve Maintenance Instructions numbered solutions detailed above.

NON-METERING FRU AIR-CONTROLLED VALVE MAINTENANCE INSTRUCTIONS		
MANUFACTURE DATE	DATE ISSUED	DRAWING NUMBER
JANUARY 2006	12/07/05	
 TO PRESENT	DATE REVISED 03/15/16	9940-204-001