


OWNERS MANUAL & INSTALLATION GUIDE

Wall Bottle Filler

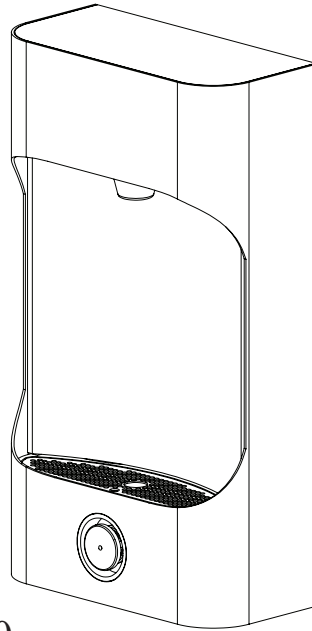

GT1300

Fillers and Fountains are among the most hassle free units to install on the market today. To insure that these models are installed correctly, **PLEASE READ THESE SIMPLE INSTRUCTIONS BEFORE STARTING THE INSTALLATION. CHECK YOUR INSTALLATION FOR COMPLIANCE WITH PLUMBING, ELECTRICAL AND OTHER APPLICABLE CODES.** After installation, leave these instructions with the units for future reference.

IMPORTANT! INSTALLER PLEASE NOTE:

ALL SERVICE TO BE PERFORMED BY AN AUTHORIZED SERVICE PERSON.

The grounding of electrical equipment such as telephone, computers, etc., to water lines is a common procedure. This grounding may be in the building or may occur away from the building. This grounding can cause electrical feedback into a fountain, creating an electrolysis which causes a metallic taste or an increase in the metal content of the water. This condition is avoidable by using the proper materials as indicated. Any drain fittings provided by the installer should be made of plastic to electrically isolate the fountain from building's plumbing system.

PARTS LIST:

1 Gt1300 Bottle Filler, 1 Filter Cartridge, 1 Plastic drain elbow, 1 Spout wrench, 1 Torx driver, 1 Wall bracket.

RECOMMENDED TOOLS:

Level, Drill, 3/8” Drive w/ socket set, Slip joint pliers.

REQUIRED PARTS:

3/8” screws (FOR WOOD,STEEL OR CONCRETE DEPENDING ON WALL). A 1-1/4” trap must be used after waste bend. 3/8” tubing(TO BE USED FOR WATER SUPPLY INLET).

PRODUCT INSTALLATION:

When installing this product, local, state or federal codes should be adhered to.


1. These units are to be mounted on a smooth, flat, Finished surface with adequate support structure. NOTE: Mounting structure must be capable of supporting 300 lb. load on fountain.
2. Install shut-off valve on water supply. (Not furnished).
3. Install unit using 3/8” minimum screws or bolts. (Not Furnished)
4. Connect water supply and waste pipe. Water connection and drain must comply with local codes.
5. Turn on water supply and check all connections for leaks.

CAUTION: This unit is rated for inlet water pressure of 20-105 PSI. A pressure reducing regulator should be used if the inlet water supply exceeds 105 PSI. Any damage caused by reason of connecting this product to supply line pressures higher than 105PSI and lower than 20PSI is the responsibility of the installers.

6. Water supply 3/8” O.D. Plastic pex tubing.
7. Waste is 1-1/4” IPS. Contractors to supply waste trap and service stop valve in accordance with local code.
8. Connecting line to be made of unplated copper and should be thoroughly flushed to remove all foreign matter before being connected to unit. This unit is manufactured in such a manner that it does not in any way cause taste, odor, color, or sediment problems.

REPLACEMENT FILTER CARTRIDGE

Cartridge: Ap Easy - C-LC Cartridge system, Manufactured by 3M Purification, Inc.
Call 800-832-7383 to reorder cartridges.

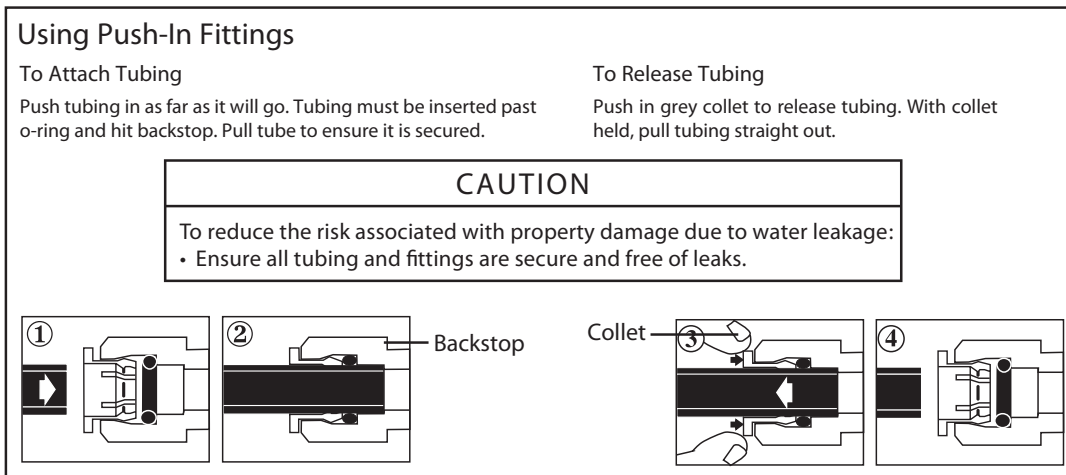

CLEANING:

The cleaning of the Globaltap units should be done with a non acid bathroom cleaner.

WARRANTY:

All Globaltap units come with a 2 year manufacturers warranty on all steel, and a 1 year on all internal parts.

Performance Data Sheet

Models: LC and LC Cooler Use Replacement Cartridge C-LC

The concentration of the indicated substances in water entering the system was reduced to a concentration less than or equal to the permissible limit for water leaving the system as specified in NSF/ANSI Standard 42 and Standard 53.

System tested and certified by NSF International against NSF/ANSI Standard 42 and Standard 53 for the reduction of substances listed below.



Capacity 750 Gallons (2,839 Liters) Contaminant Reduction Determined by NSF testing.

Contaminant Reduction	Average Influent	NSF/ANSI Specified Challenge Concentration	Avg % Reduction	Average Product Water Concentration	Max Permissible Product Water Concentration	NSF Reduction Requirements	NSF Test Report
Chlorine Taste and Odor	2.0 mg/L	2.0 mg/L ± 10%	97.5%	0.05 mg/L	N/A	≥ 50%	J-00056501
Nominal Particulate Class I, ≥0.5 to < 1.0 µm	13,666,667 pts/mL	At least 10,000 particles/mL	98.9%	143,333 pts/mL	N/A	≥85%	J-00056506
Cyst*	122,500 cysts/L	Minimum 50,000 cysts/L	99.99%	1 cyst/L	N/A	≥99.95%	J-00056513
Lead @ pH 6.5	0.153 mg/L	0.15 mg/L ± 10%	99.3%	0.001 mg/L	0.010 mg/L	N/A	J-00056515
Lead @ pH 8.5	0.150 mg/L	0.15 mg/L ± 10%	99.3%	0.001 mg/L	0.010 mg/L	N/A	J-00058784

* Based on the use of *Cryptosporidium parvum* oocysts

Application Guidelines/Water Supply Parameters	
Service Flow	0.75 gpm (2.8 lpm)
Water Supply	Potable Water
Water Pressure	25 - 120 psi (172 - 827 kPa)
Water Temperature	40° F - 100° F (4.4° C - 38° C)

It is essential that the manufacturer's recommended installation, maintenance and filter replacement requirements be carried out for the product to perform as advertised. See Installation Manual for Warranty information.

Note: While the testing was performed under standard laboratory conditions, actual performance may vary.

Replacement Cartridge: C-LC. For estimated costs of replacement elements please call 1-800-222-7880 or visit our website at www.cuno.com

CUNO is a trademark of 3M Company used under license.
 3M is a trademark of 3M Company.
 NSF is a trademark of NSF International.
 © 2008 3M Company. All rights reserved.
 INSTR2140 0209



WARNING

To reduce the risk associated with ingestion of contaminants:

- Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before and after the system. Systems certified for cyst reduction may be used on disinfected water that may contain filterable cysts.

EPA Establishment Number 070595-CT-001

CAUTION

To reduce the risk associated with property damage due to water leakage:

- Read and follow Use Instructions before installation and use of this system.
- Installation and use **MUST** comply with all state and local plumbing codes.
- Do not install if water pressure exceeds 120 psi (827 kPa). If your water pressure exceeds 80 psi, you **must** install a pressure limiting valve. Contact a plumbing professional if you are uncertain how to check your water pressure.
- Do not install where water hammer conditions may occur. If water hammer conditions exist you **must** install a water hammer arrester. Contact a plumbing professional if you uncertain how to check for this condition.
- Do not install on hot water supply lines. The maximum operating water temperature of this filter system is 100° F (38° C).
- Protect filter from freezing. Drain filter when temperatures drop below 40°F (4.4°C).


The disposable filter cartridge **must** be replaced every 6 months, at the rated capacity or if a noticeable reduction in flow rate occurs.

Parts and service available from:



CUNO Incorporated
 400 Research Parkway
 Meriden, CT 06450 U.S.A
 Toll Free: 1-800-222-7880
 Worldwide: 203-237-5541

www.aquapure.com • www.cuno.com

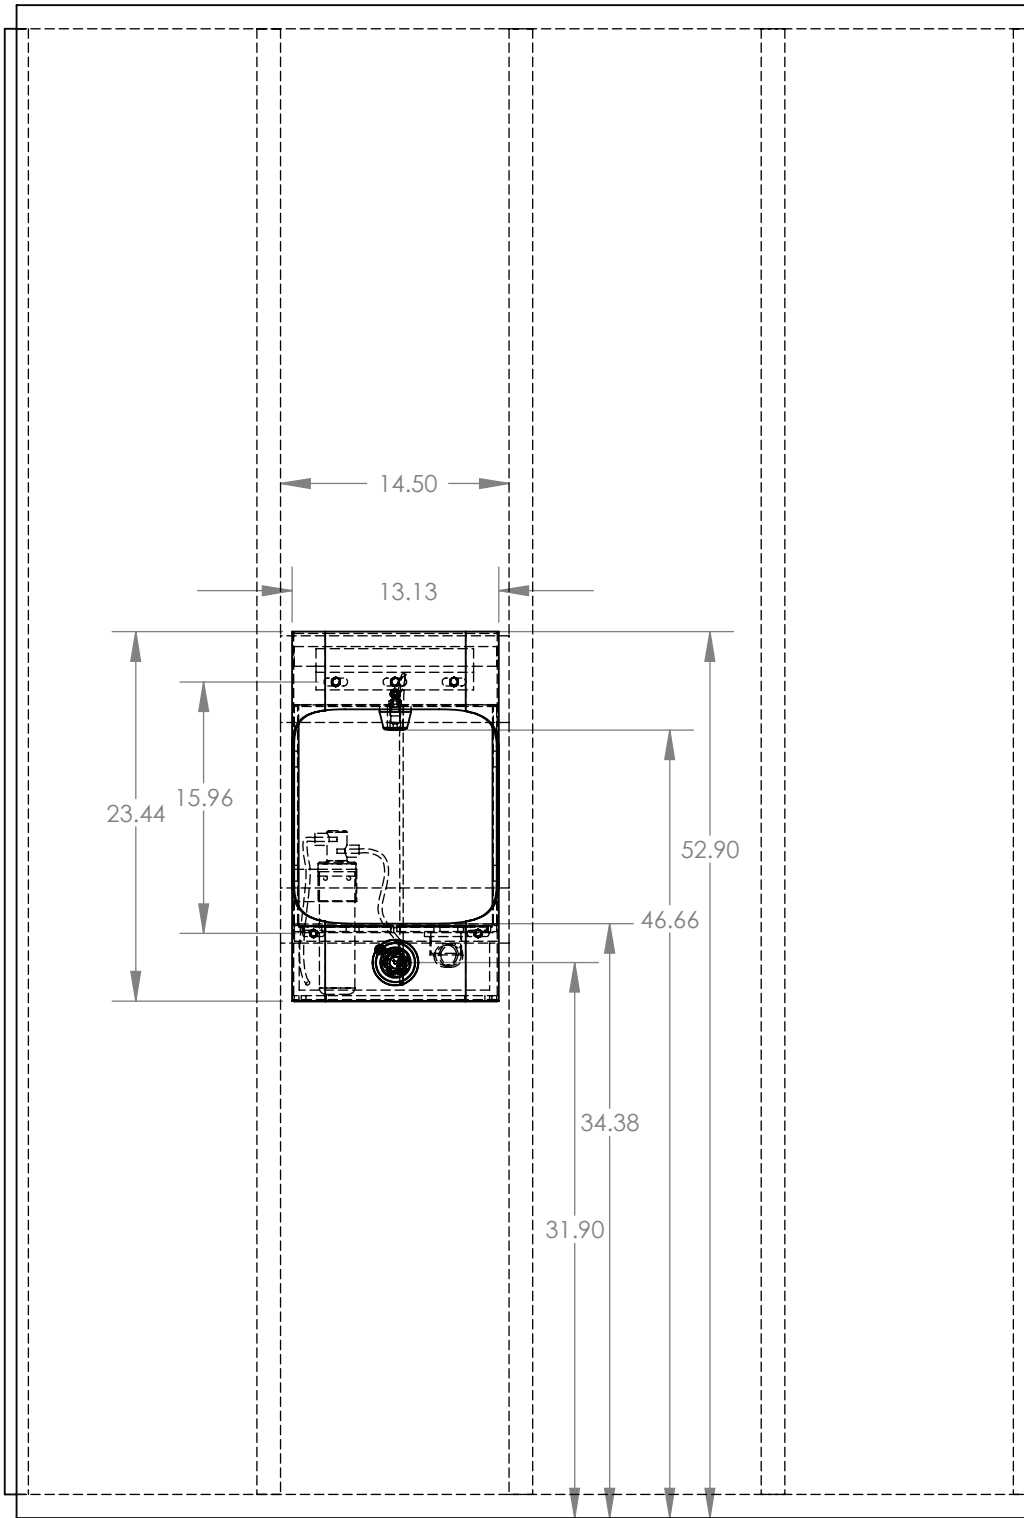


MODEL	GT1300-R2
DATE DRAWN	4/2/2012
DRAWN BY	J.GRINDLE
CHECKED BY	J.GRINDLE
SIZE	LxWxH
WEIGHT	XXX LBS
COMMENTS:	

PROPRIETARY AND CONFIDENTIAL


THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF PETERSEN MFG. CO.. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF PETERSEN MFG. CO. IS PROHIBITED.

MATERIAL	STEEL
FINISH	
DO NOT SCALE DRAWING	


SIZE	DWG. NO.	REV.
A	Stud Wall Attach	
SHEET 1 OF 1		

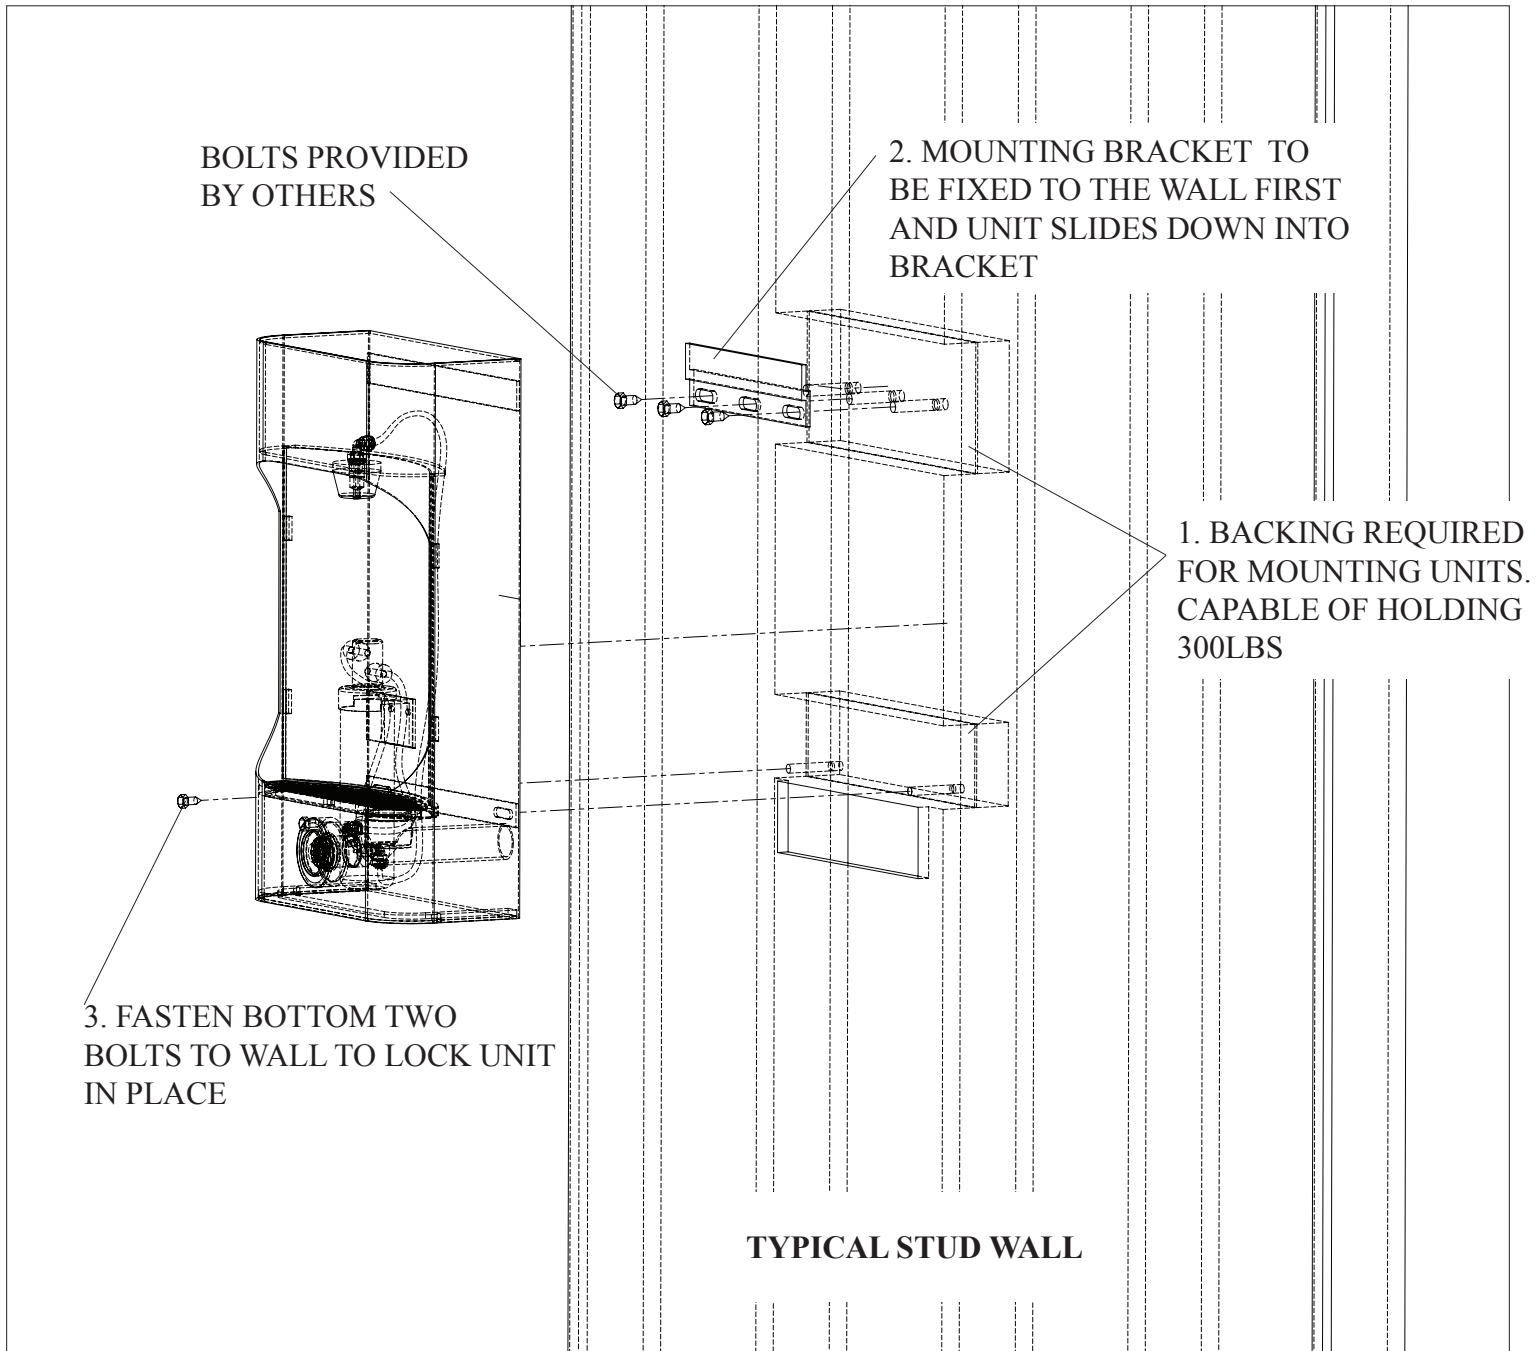

1. Install backing structure necessary to hang fountain, capable of holding 300lbs
2. Place mounting bracket on the wall, level, mark holes and drill. Attach bracket.
3. Place unit on previously installed bracket, mark bottom two holes, drill and fasten unit to wall.

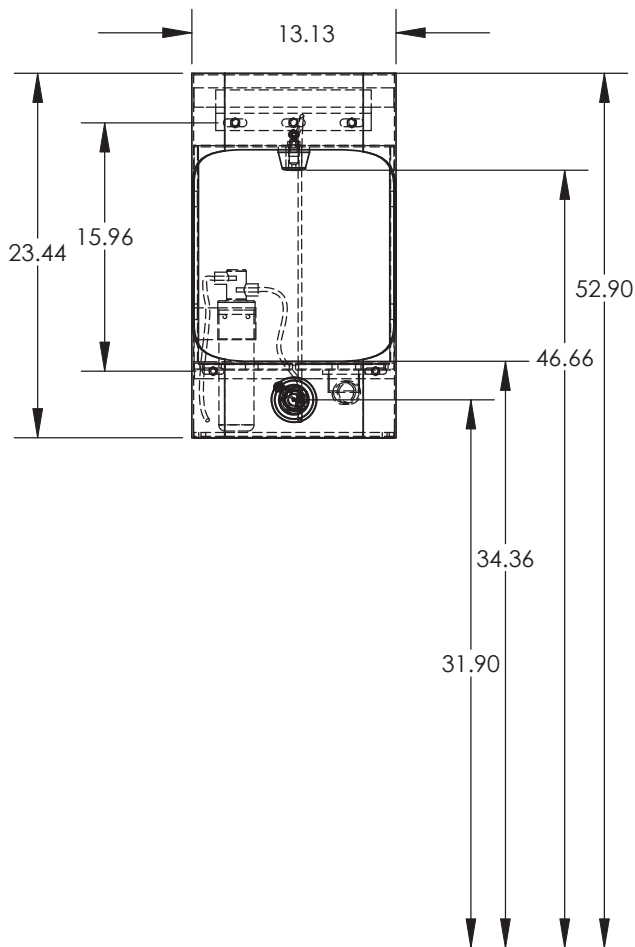

			THE INFORMATION CONTAINED IN THIS
		LxWxH	

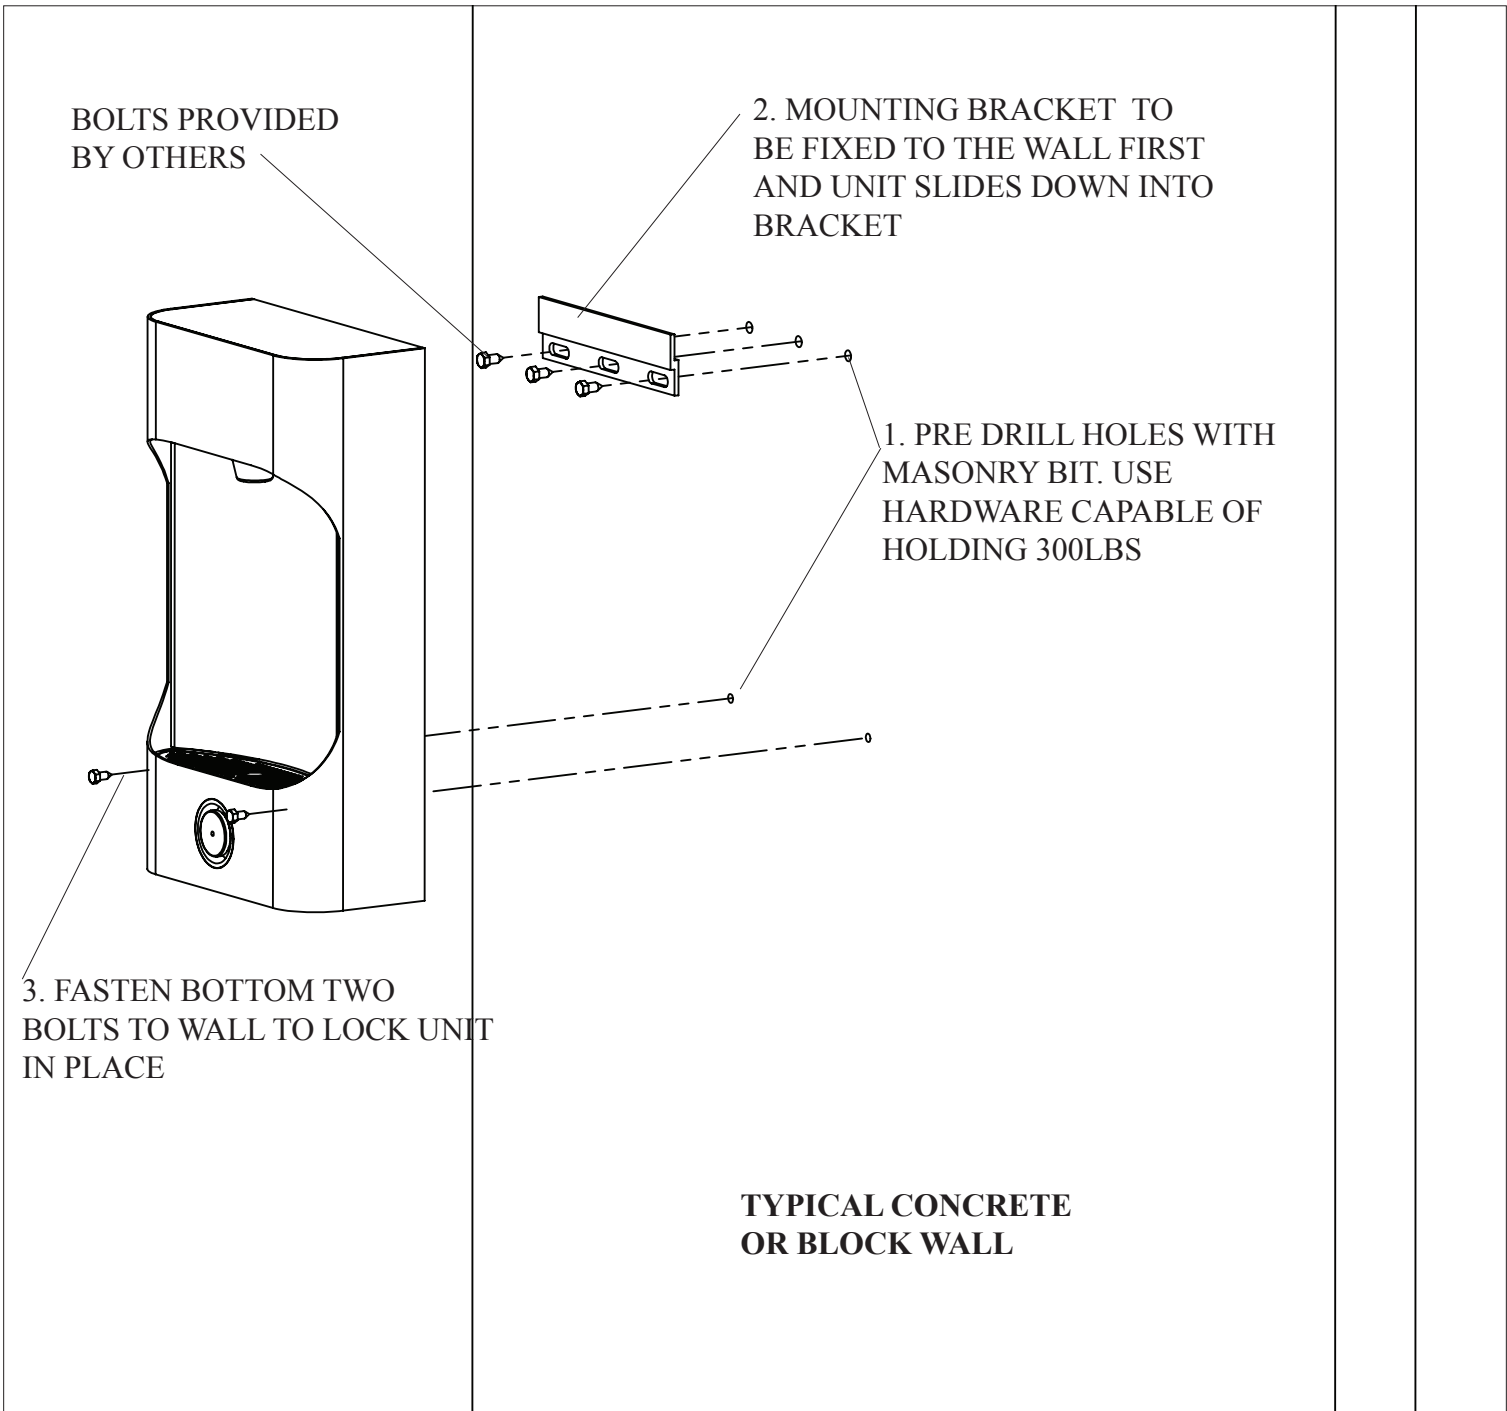

1. Pre drill holes with masonry bit. Use hardware capable of holding 300 lbs.
2. Place mounting bracket on the wall, level, mark holes and drill. Attach bracket.
3. Place unit on previously installed bracket, mark bottom two holes, drill and fasten unit to wall.