


4 Foot Deluxe Park Bench w/ Arms


For Fastener Pack
(FP-DB4BA-CU-02)

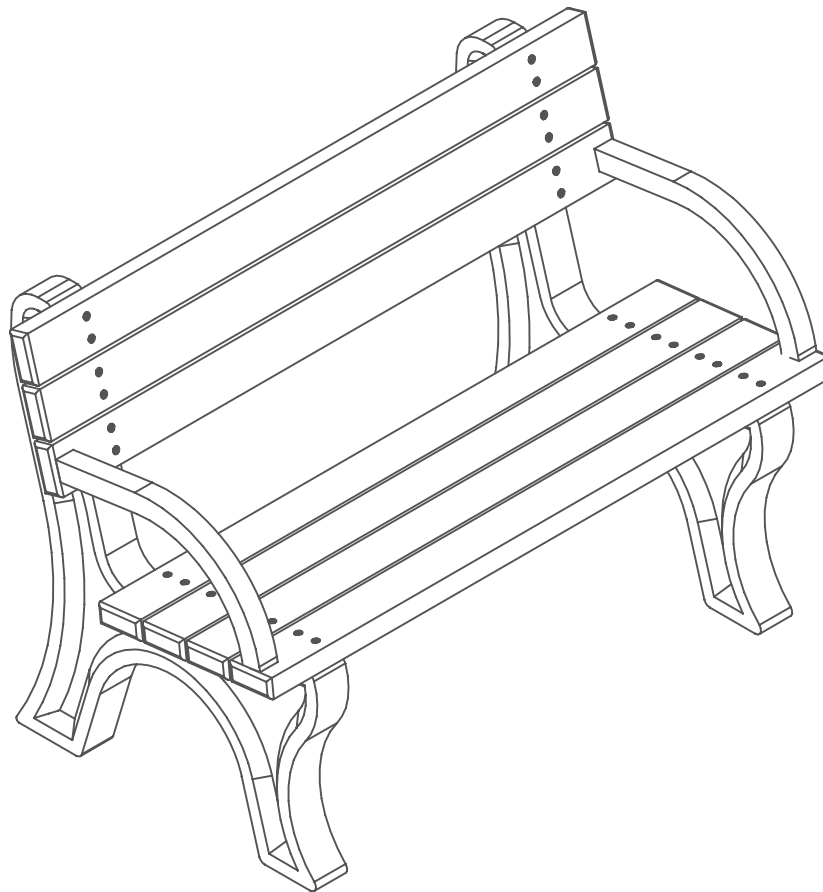

Congratulations ! !


You have just purchased the finest recycled plastic
park bench available. Enjoy ! ! !

Before assembly, please make sure all components are included.

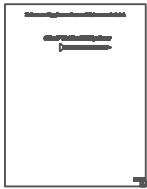

FP - Fastener Pack


**(1) - One Fastener Pack
FP-DB4BA-CU-02**

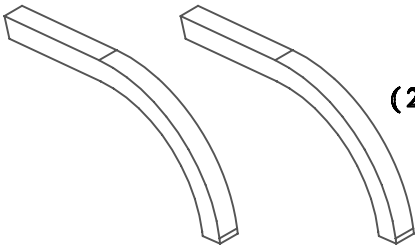


**(2) - Two Bench Arms
BP-BA-A-01**

D - Bench Arm

D - Bench Arm

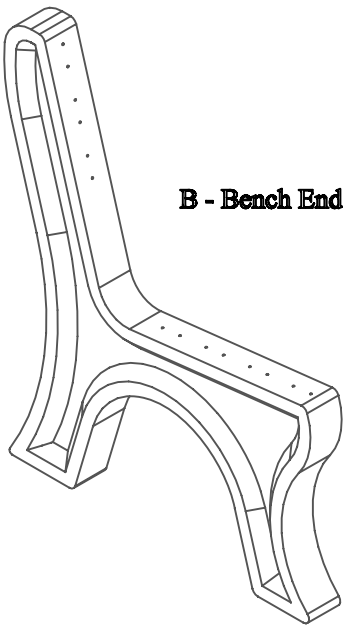

B - Bench End

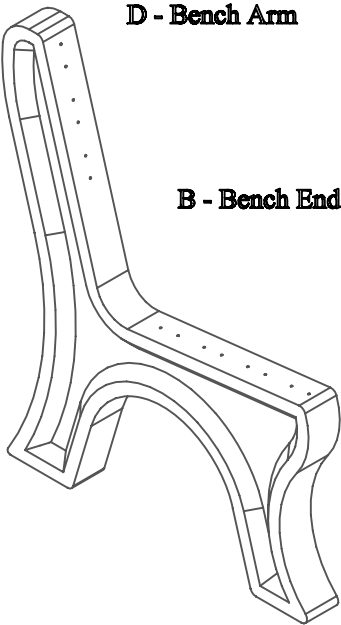

B - Bench End

**(2) - Two Bench Ends
PS-SBBE-D-02**

•	A - Bench Board	•
•	A - Bench Board	•
•	A - Bench Board	•
•	A - Bench Board	•
•	A - Bench Board	•


**(5) - Five Bench Boards
BP-DB4B-A-02**

•	C- Bench Board w/ Arm Holes	•
•	C- Bench Board w/ Arm Holes	•

**(2) - Two Bench Boards w/ Arm Holes
BP-DB4BA-A-02**

Before assembly, please make sure all fasteners are included.

32 - #12 x 3" Flat Head Phillips Screw



Also needed for this assembly will be the following materials:

1 - #3 Phillips Drive Bit


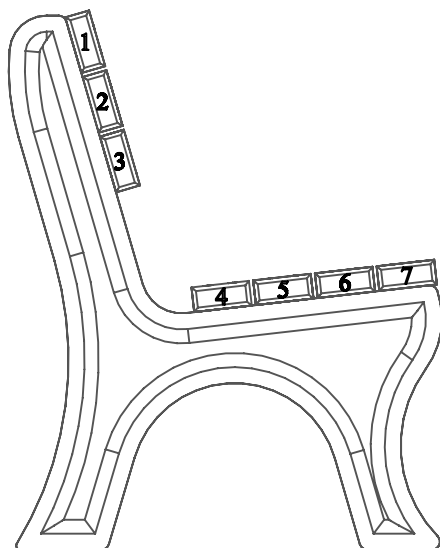


Fig #1:


In order to make the assembly of this Deluxe Bench easier while going through the assembly process the board positions are numbered and will be referenced in later steps.

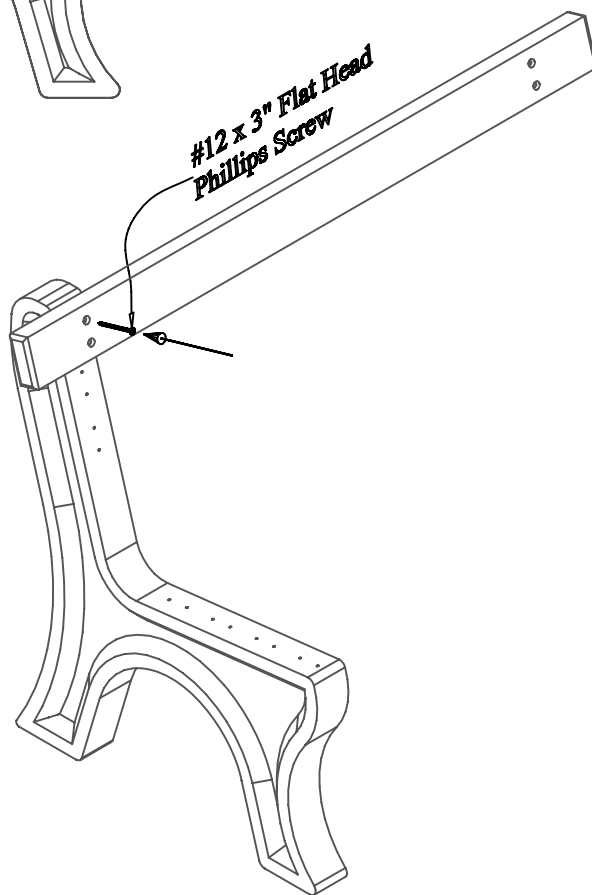

Step #1:

Stand (1) One bench end upright and place (1) One bench board on position 1 being sure to align the pre-drilled holes to the pilot holes in the bench end. After the holes are properly aligned, fasten with (1) One #12 x 3" Flat Head Phillips Screw in the top pre-drilled hole.

Note: Do not tighten screw completely. This will be done in a later step.

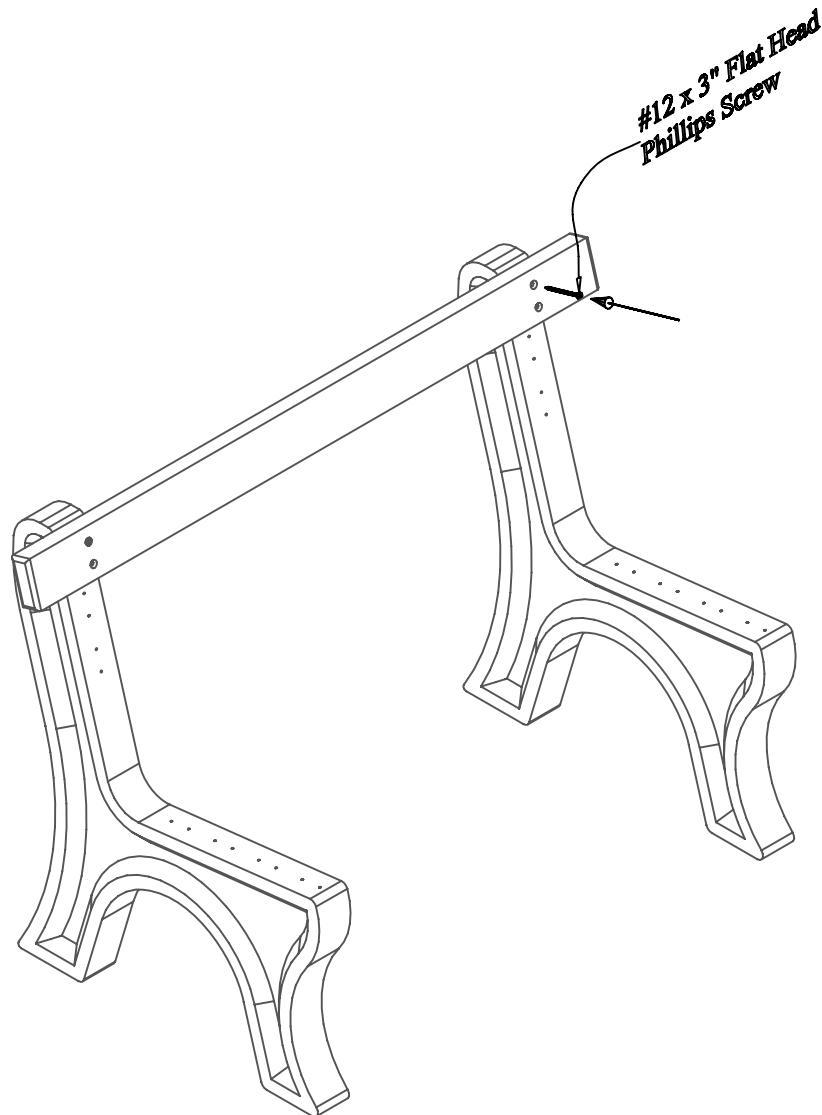

Step #2:


Stand the other bench end upright and place the bench board already attached to the first bench end, on position 1 being sure to align the pre-drilled holes to the pilot holes in the bench end. After the holes are properly aligned, fasten with (1) One #12 x 3" Flat Head Phillips Screw in the top pre-drilled hole.

Note: Do not tighten screws completely. This will be done in a later step.

Step #3:


Align bottom pre-drilled holes to the pilot holes in the bench end. After the holes are properly aligned, fasten with (1) One #12 x 3" Flat Head Phillips Screw per hole.

Note: Be sure to tighten screws completely after this step.

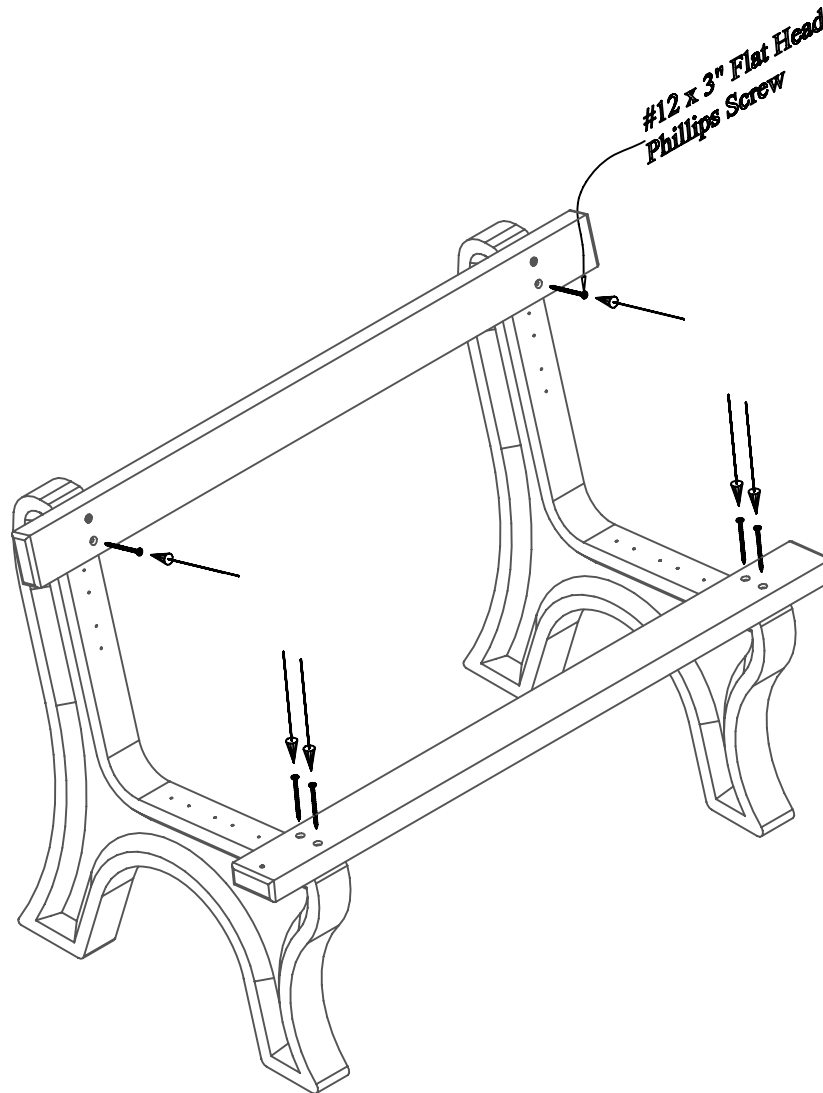


Step #4:

Place a bench board w/ arm holes on position 7. Repeat Steps 1 - 3 to attach. Use (1) One #12 x 3" Flat Head Phillips Screw per hole to fasten.

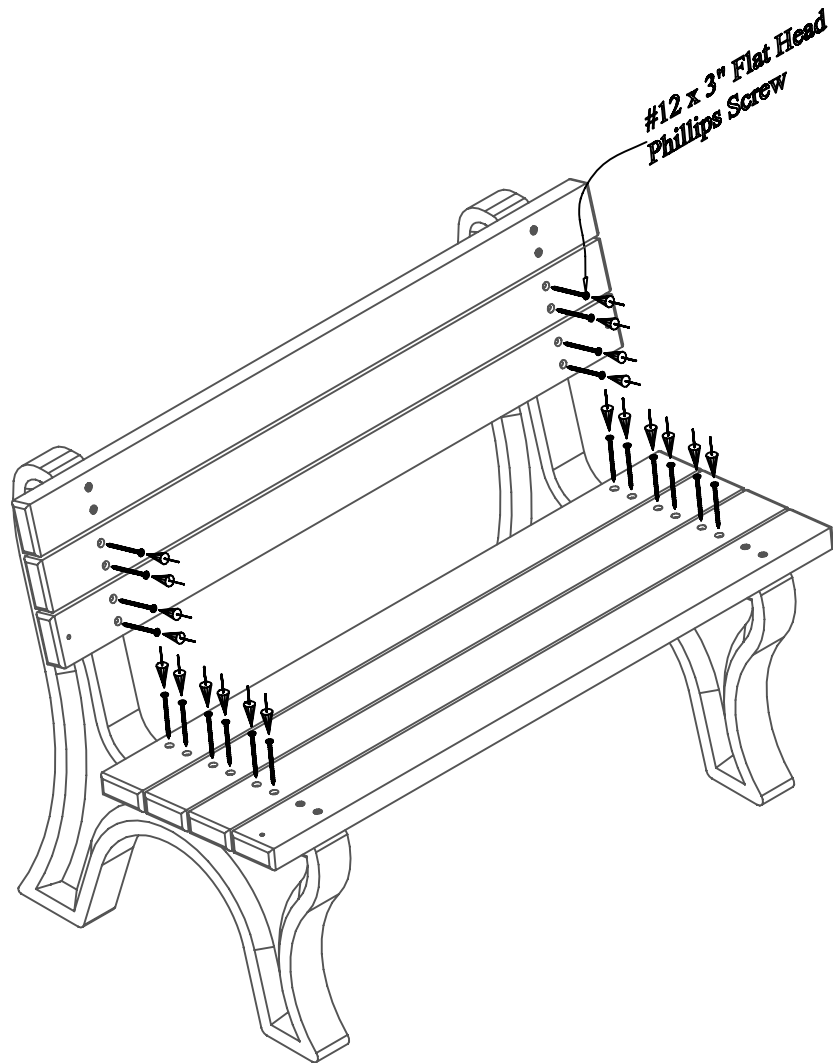

Step #5:

Repeat Steps 1 - 3 to attach bench boards on positions 2, 4, 5, 6 and a bench board w/ arm holes in position 3. Use (1) One #12 x 3" Flat Head Phillips Screw per hole to fasten.

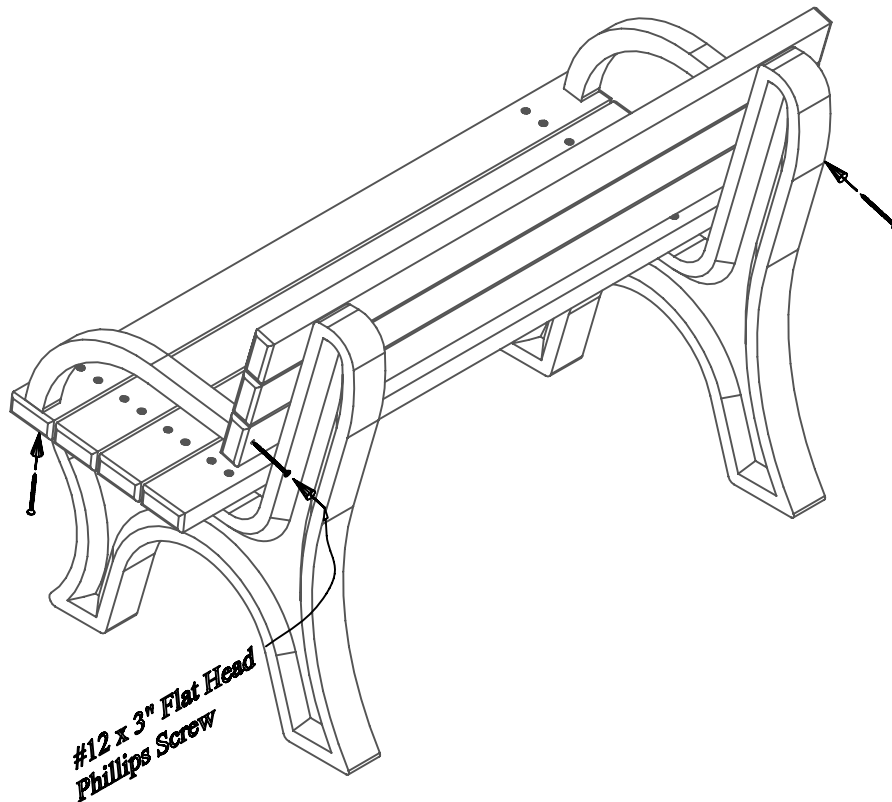

Step #6:

Position the bench arms as shown above. Align the pilot holes to the pre-drilled holes in the bench board w/ arm holes. After the holes are properly aligned, fasten with (1) One #12 x 3" Flat Head Phillips Screw per hole.