


4 Foot Economizer Traditional Park Bench w/ Arms

For Fastener Pack
(FP-ET4BA-CU-02)

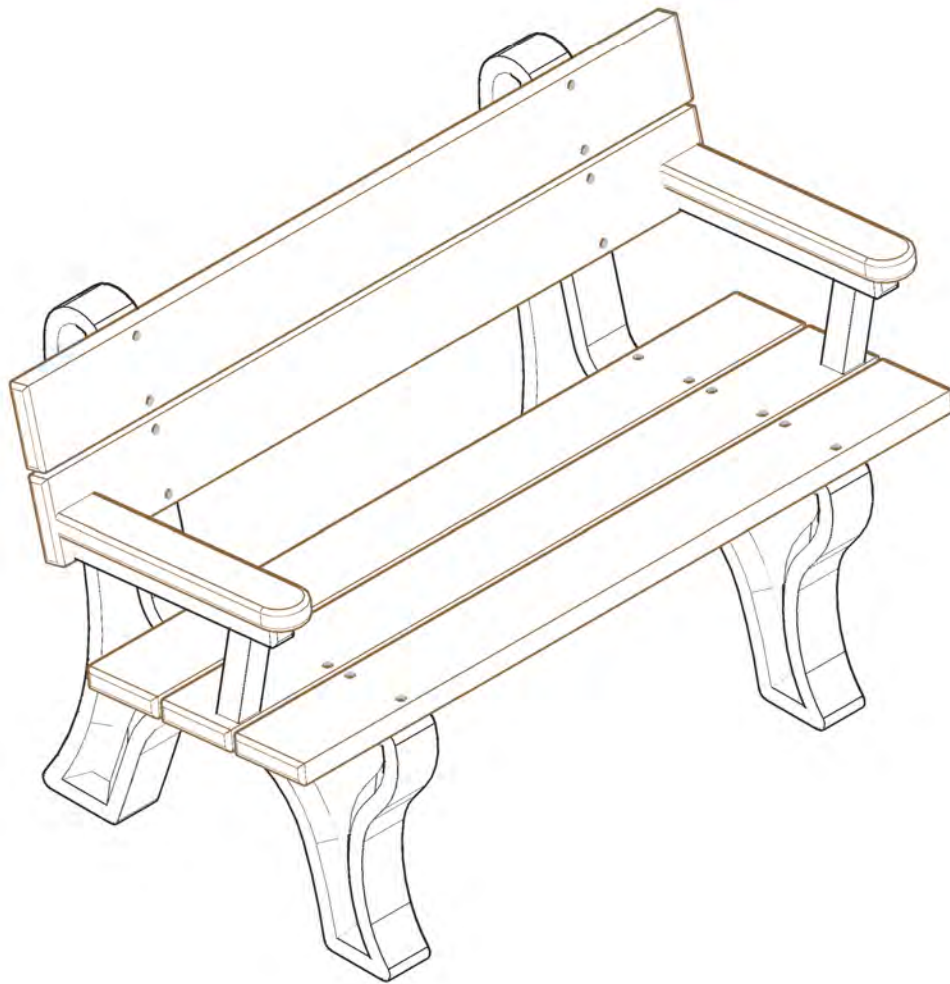

Congratulations ! !


**You have just purchased the finest recycled plastic
park bench available. Enjoy ! ! !**

Before assembly, please make sure all components are included.




(1) - One Fastener Pack
FP-ET4BA-CU-02

FP - Fastener Pack

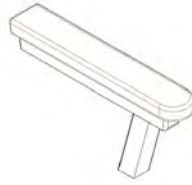

D - Bench Arm


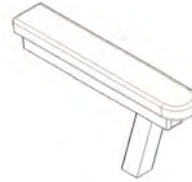


D - Bench Arm

(2) - Two Bench Arms
BSA-ETBA-A-00

B - Bench End


B - Bench End

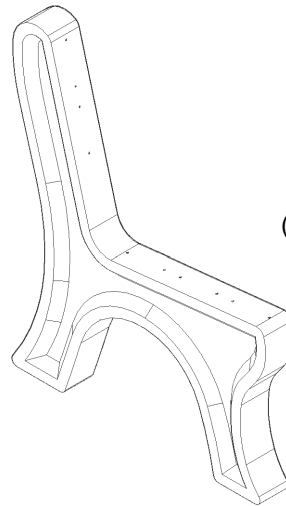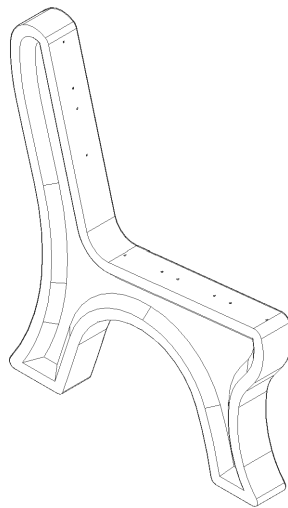

(2) - Two Bench Ends
PS-SBBE-ET-02



(3) - Three Bench Boards
BP-ET4B-A-02

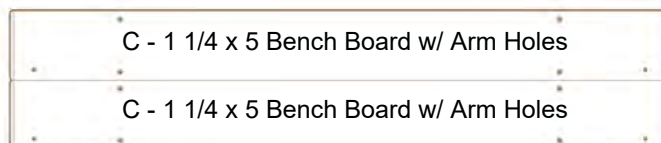

(2) - Two Bench Board
BP-ET4BA-A-02

FS-ET4BA-CAP-02

Before assembly, please make sure all fasteners are included.

24 - #12 x 3" Flat Head Phillips Screw



Also needed for this assembly will be the following materials:



1 - #3 Phillips Drive Bit

***IMPORTANT NOTICE*:**

- DO NOT OVER-TIGHTEN SCREWS.
- USE A DRILL WITH ADJUSTABLE TORQUE FOR BEST RESULTS.
- OVER-TIGHTENING WILL RESULT IN STRIPPING OUT THE PILOT HOLE, AND SCREW WILL "SINK" INTO THE PLASTIC WHICH MAY CAUSE A STRESS FRACTURE.

Fig #1:


In order to make the assembly of this Economizer Traditional Bench easier while going through the assembly process the board positions are numbered and will be referenced in later steps.

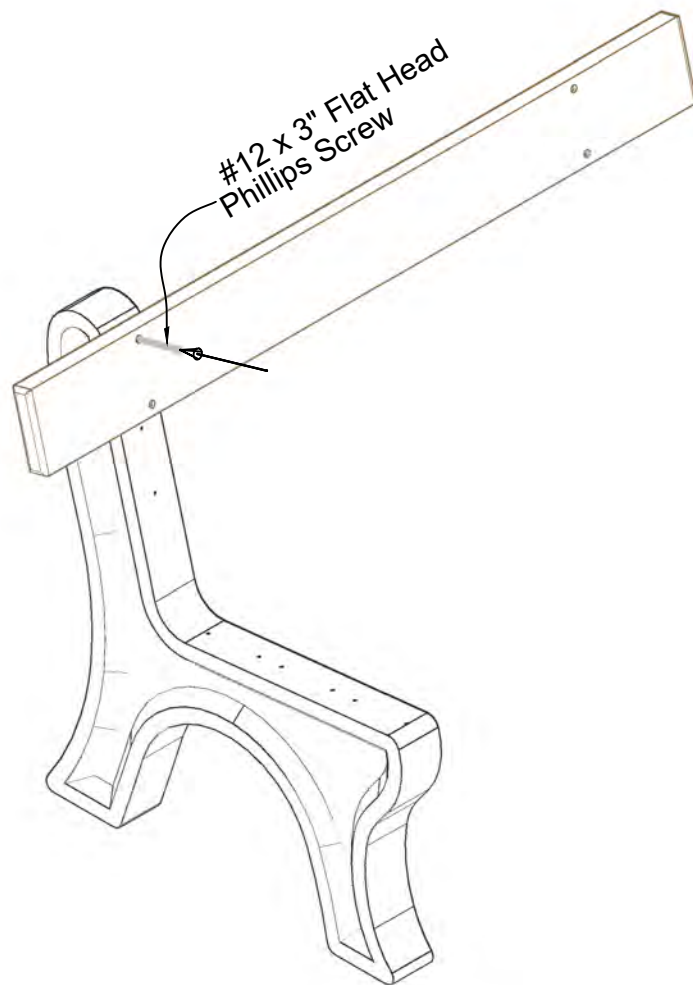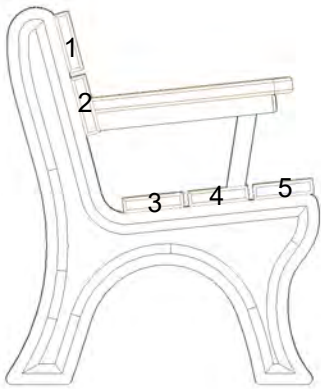

Step #1:

Stand (1) One bench end (Part B) upright and place (1) One bench board (Part A) on position 1 being sure to align the pre-drilled holes to the pilot holes in the bench end. After the holes are properly aligned, fasten with (1) One #12 x 3" Flat Head Phillips Screw in the top pre-drilled hole.

Note: Do not tighten screw completely. This will be done in a later step

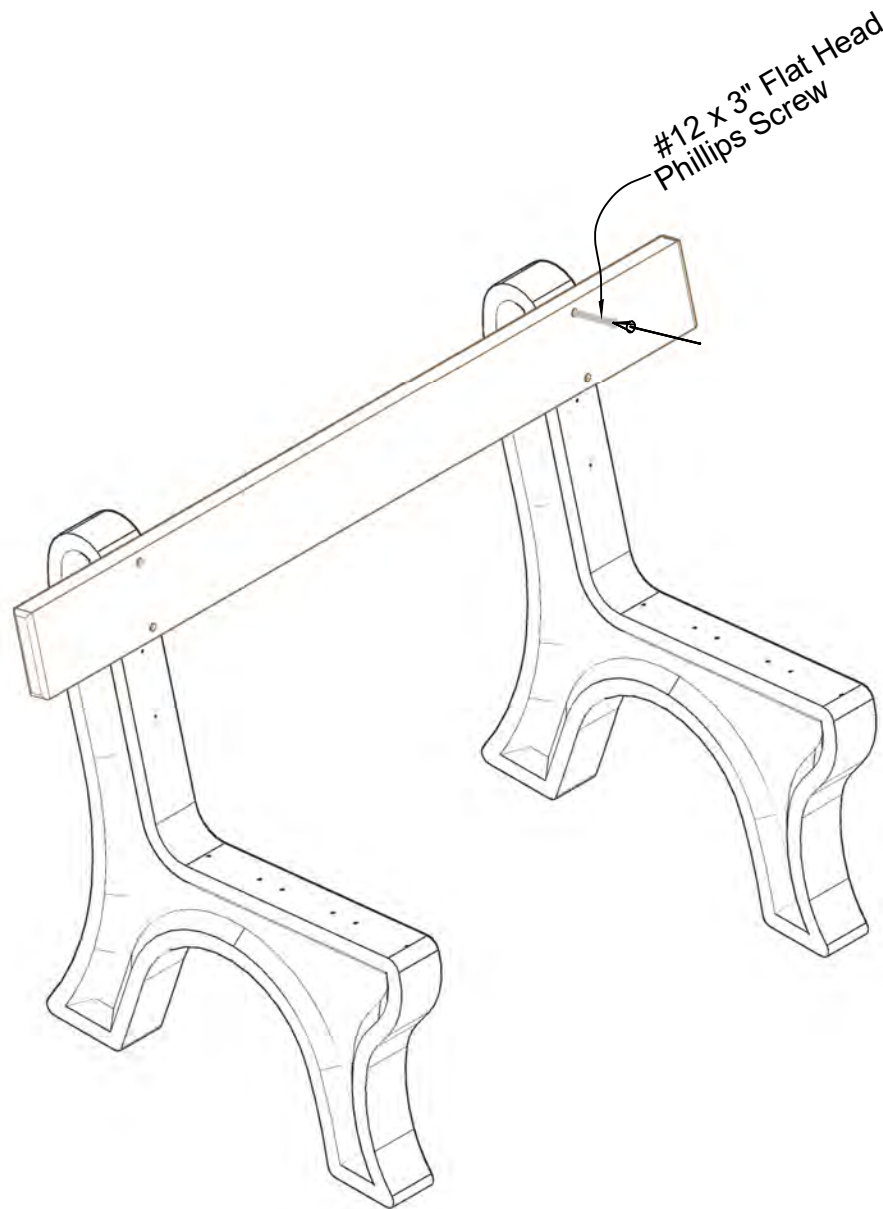

Step #2:


Stand the other bench end (Part B) upright and place the bench board (Part A) already attached to the first bench end, on position 1 being sure to align the pre-drilled holes to the pilot holes in the bench end. After the holes are properly aligned, fasten with (1) One #12 x 3" Flat Head Phillips Screw in the top pre-drilled hole.

Note: Do not tighten screws completely. This will be done in a later step.

Step #3:


Align bottom pre-drilled holes to the pilot holes in the bench end (Part B). After the holes are properly aligned, fasten with (1) One #12 x 3" Flat Head Phillips Screw per hole.

Note: Be sure to tighten screws completely after this step.

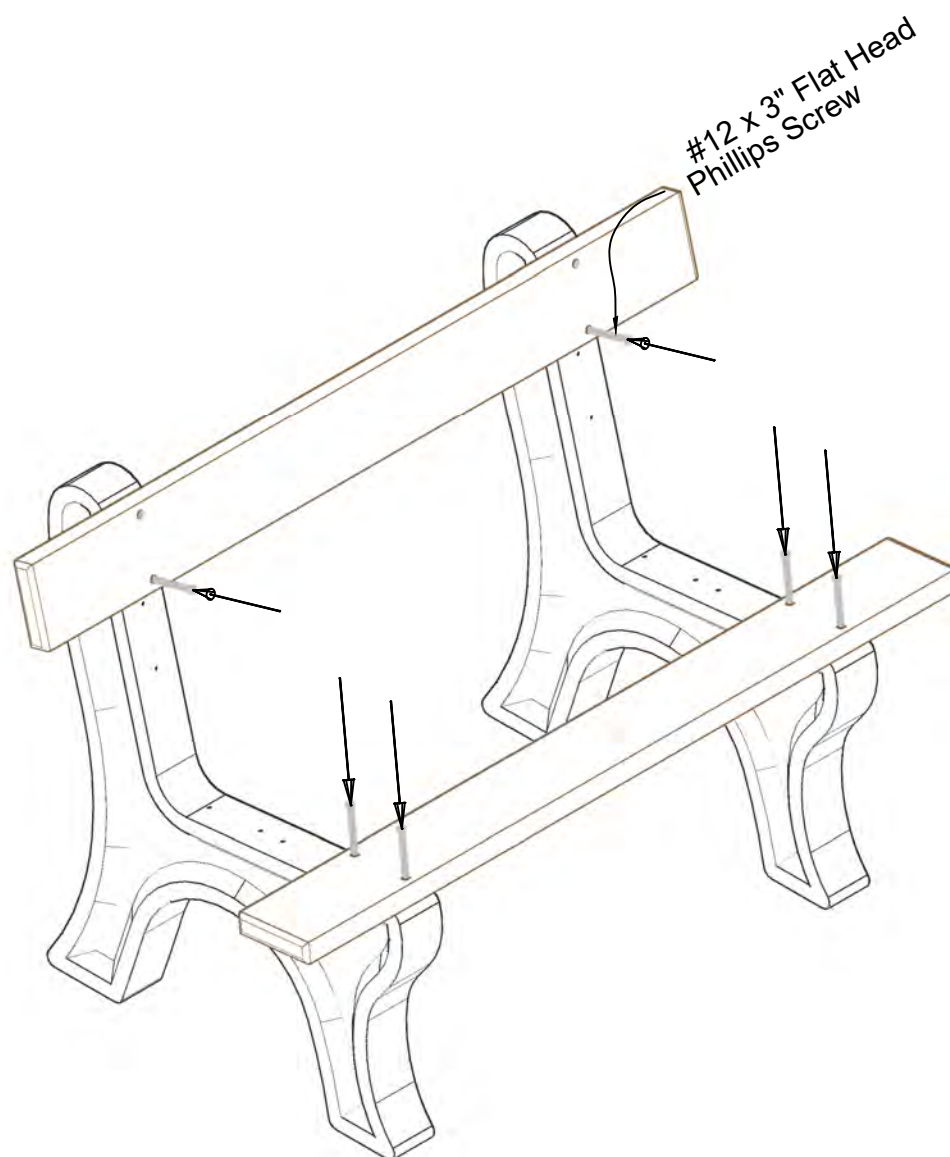

Step #4:


Place a bench board (Part A) on position 5. Repeat Steps 1 - 3 to attach. Use (1) One #12 x 3" Flat Head Phillips Screw per hole to fasten.

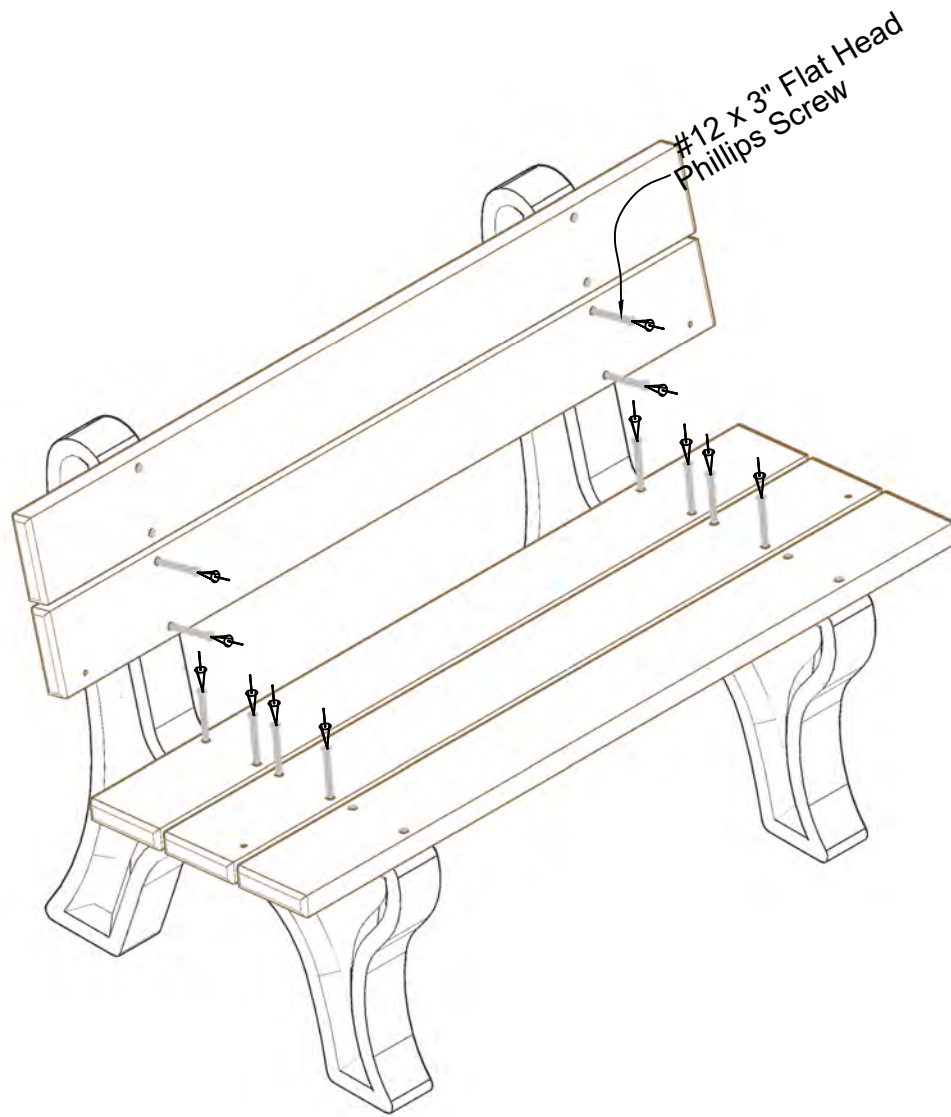

Step #5:

Repeat Steps 1 - 3 to attach bench boards (Part A) on positions 3 and bench board w/ arm holes (Part C) in positions 2 and 4. Use (1) One #12 x 3" Flat Head Phillips Screw per hole to fasten.

*** When attaching bench board (Part C) in position 2 arm hole should be at the bottom of the board. When attaching bench board (Part C) in position 4 arm hole should be to the front of the board.

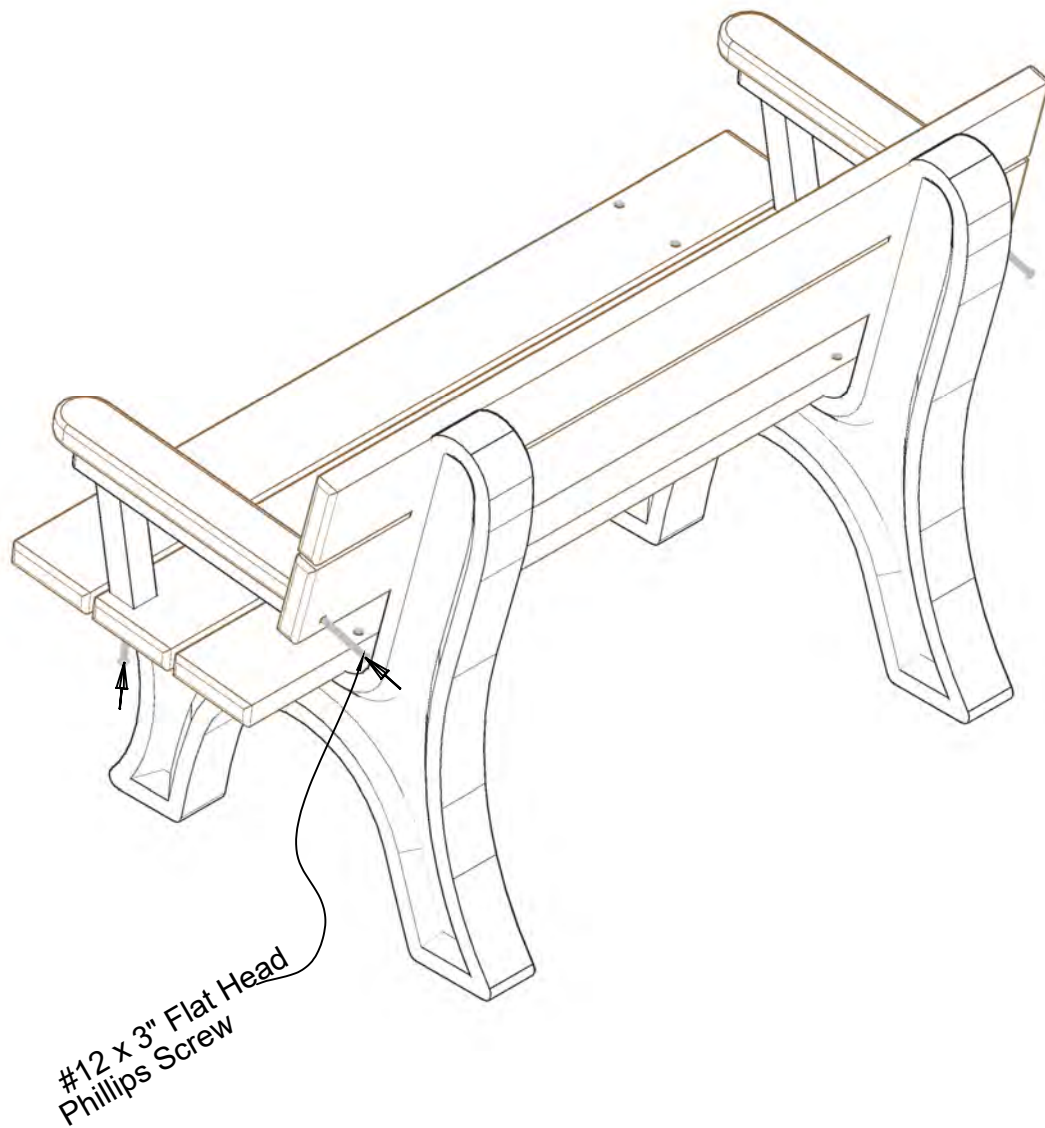

Step #6:

Position the bench arms (Part D) as shown above. Align the pilot holes to the pre-drilled holes in the bench board w/ arm holes. After the holes are properly aligned, fasten with (1) One #12 x 3" Flat Head Phillips Screw per hole.

DEAR VALUED CUSTOMER,

THANK YOU FOR PURCHASING THIS
PRODUCT. THIS PRODUCT IS
MANUFACTURED USING RECYCLED
MATERIALS AND MAY HAVE SLIGHT
COLOR VARIATIONS, OCCASIONAL
SPECKS OF COLOR OR IRREGULAR
SURFACE PATTERNS. THESE ARE
NORMAL CONDITIONS OF RECYCLED
PLASTICS AND MAKE EACH PIECE OF
FURNITURE UNIQUE. THESE
CHARACTERISTICS DO NOT AFFECT THE
STRENGTH, QUALITY OR PERFORMANCE
OF THE PRODUCT.

THANK YOU AGAIN FOR PURCHASING
THIS PRODUCT AND HELPING OUR
ENVIRONMENT.