

HEX TABLE



TOOLS REQUIRED: VARIABLE SPEED DRILL
OR SCREW GUN
&
7/16 SOCKET
OR IMPACT WRENCH

MATERIALS



(6) 2 1/2" LAG SCREWS



(6) 3" DECK SCREWS




(30) 3 1/2" ZINC PLATED
LAG SCREWS




(36) WASHERS



(6) BLACK SEAT/LEG
ANCHOR BLOCKS

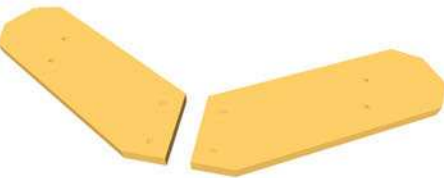

(6) SEATS- (3)LEFT (3)RIGHT

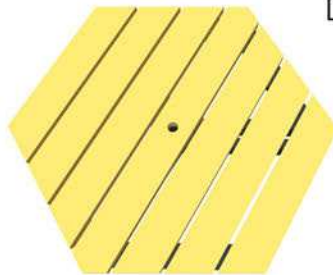

(1) TABLE TOP




(3) BASES




(3) SUPPORT ARMS

INSTRUCTIONS

(Remember not to over tighten lag screws during assembly)

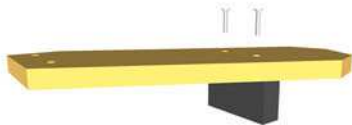

A. Attach block to seat bottom

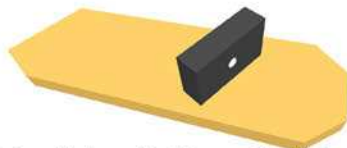

B. Bored hole on block faces side with 3 edges


1. Check Parts List and verify all Parts and Hardware.

2. Attach seat/leg anchor block to bottom of seat support using 3 1/2" lag screws with washers. See photos A and B. Each seat should have 1 seat/leg anchor block.

3. Lay the 3 support arms on a flat surface. Use the 3" deck screws to attach the support arms. Use 2 screws per side. Repeat for all 3 sides. See photos C, and D.



C. 3 support arms

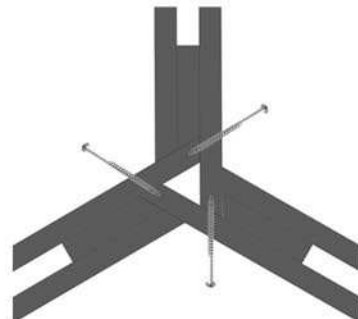

D. Screw arms together



E. Notice seat positioning on the support arms



F. Drill seats to support arm

4. Attach the seats to the support arms using 12 of the 3 1/2" lag screws and 12 washers. Align the pre-drilled holes in the seats with the pre-drilled holes in the support arms. See photos E and F.



5. Position the seat assembly approximately 10"-15" off the floor. A five gallon bucket under the center of the seat assembly works quite well. See photo G.

G. Place arms with connected seats on bucket H. Slide base under seat angle facing towards center




6. Insert all 3 bases through their respective seat. Center each leg to the counter bored holes in the seat assembly. See photos H, I, J and K.

I. Slide base between opening in support arm J. Position each base so it sits evenly under seats




7. Use the 2 1/2" lag screws to attach the base to the seat. Use a tape measure to ensure that the seat is centered. Should be around 2". Make sure the seat is pressed flat against the base. See photo L.

K. Completed bases through support arms L. Make sure base is centered under each seat

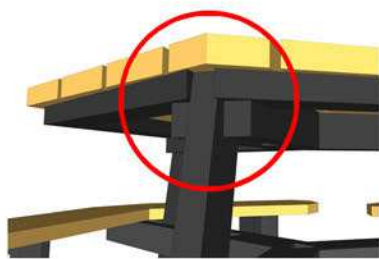

8. Attach the table top to the assembled bases. Make sure the bases are centered on the arms where the bored holes have been pre-drilled. See photos M and N.

M. Lift table and place on bases and slide into place N. Notice table secured on all 3 bases

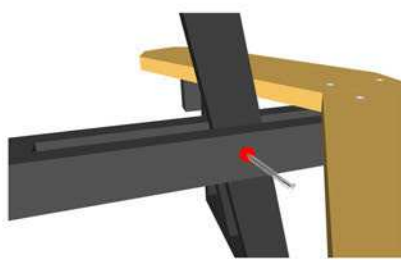

9. Attach each base to the table top and arms using the 3 1/2" lag screws and washers. Completely screw through the counter bored pilot holes. DO NOT LEAN ON TABLE TOP OR SEATS WHEN ASSEMBLING. See photos O and P.

O. Screw lag screws into top

P. Screw lag screws into bottom



10. Congratulations, you now have a Hex Table!