


FS-TB4F-CAP-01

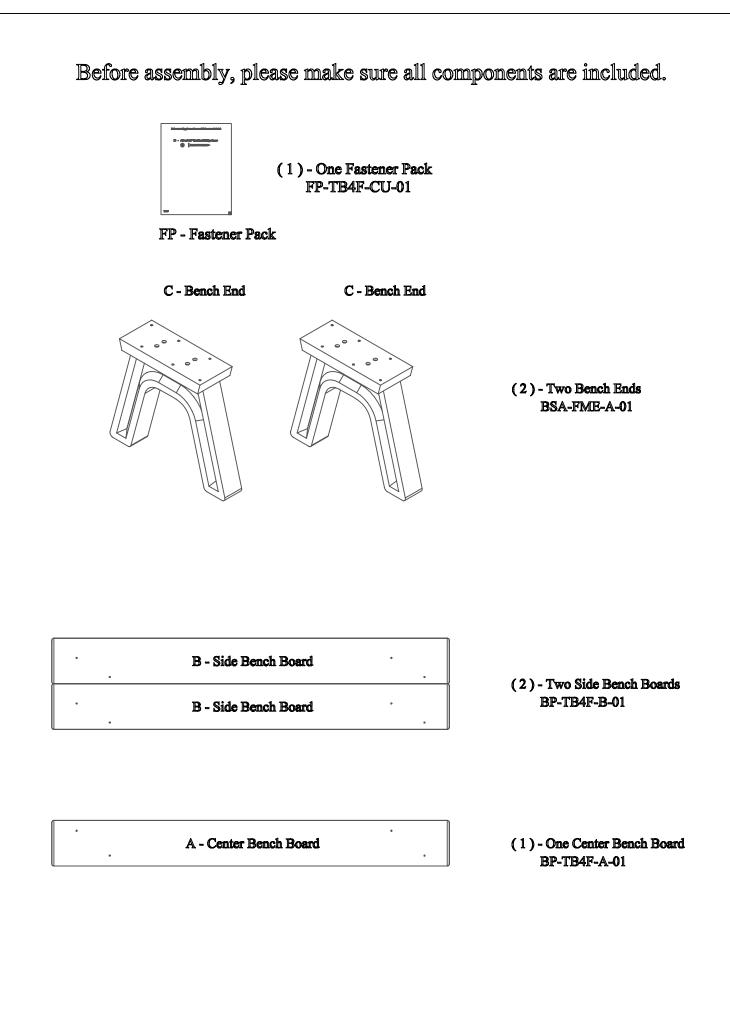

Before assembly, please make sure all fasteners are included.

12 - #12 x 2 1/2" Flat Head Phillips Screw




Also needed for this assembly will be the following materials:

1 - #3 Phillips Drive Bit

Step #1:


Place the Center Bench Board on a level surface with the pilot holes facing up. On each side of the Center Bench Board place (1) One Side Bench Board with the pilot holes closest to the Center Bench Board and facing up.

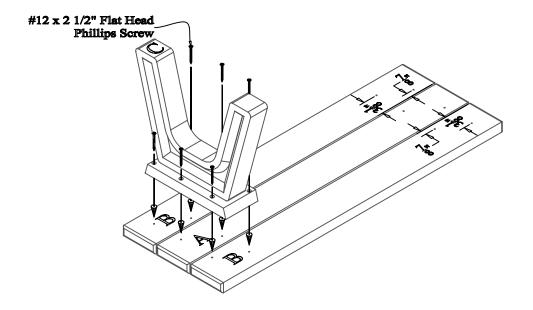

Step #2:

Place (1) One Bench End in position as shown above being sure to align the pre-drilled holes to the pilot holes in the bench boards. After the holes are properly aligned, fasten with (1) One $\#12 \ge 1/2$ " Flat Head Phillips Screw per hole to secure.

Note: Do not tighten screw completely. This will be done in a later step.

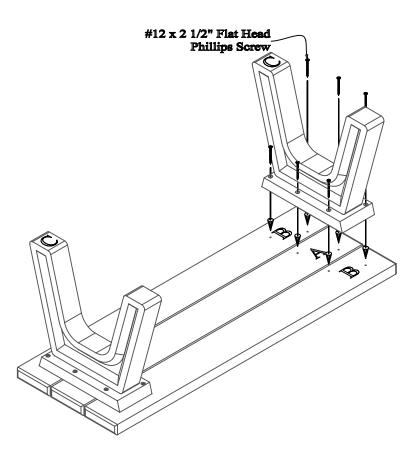

Step #3:

Place the last (1) One Bench End in position as shown above being sure to align the pre-drilled holes to the pilot holes in the bench boards. After the holes are properly aligned, fasten with (1) One $\#12 \ge 1/2"$ Flat Head Phillips Screw per hole to secure.

Note: Be sure to tighten all screws completely after this step.

IDEAIR VAILUIEID CUSTOMIER,

THANK YOU FOR PURCHASING THUS IPIROIDUCT, TIHUS IPIROIDUCT IS MLANUIFACTIUIRIEID USIING IRIECYCILIEID MIATTERIAILS AND MAY HAVE SILIGHT COLOR VARIATIONS, OCCASIONAL SIPIECIKS OIF COILOIR OIR IIRIRIEGUILAIR SUIRIFACIE IPATITIEIRNS. TIHIESIE AIRIE NORMAL CONDITIONS OF RECYCLED IPILASTIICS AND MAIKE EACHI PHECE OF IFURNITURE UNIQUE. THIESE CHIAIRACTTEIRIISTTICS IDO NOTT AIFIFIECT THE STRENGTH, QUALITY OR PIEIRIFOIRMIANCIE OIF THIE PIROIDUCT.

THANK YOU AGAIN FOR PURCHASING THIS PRODUCT AND HELPING OUR ENVIRONMENT.