

TERRA BOUND SOLUTIONS™

20020 Hickory Twig Way • Spring, TX 77388

Phone: 877-857-2915 • Fax: 281-288-2870

Email: heather@terraboundsolutions.com • Web: www.terraboundsolutions.com

Recommended Crew:

Minimum 2 People

Tools Required for Assembly:

T-30 TORX Bit

3/16" x 6" Drill Bit

Post Hole Digger / Shovel / Auger

Tape Measure

Level

High Speed 3/8" electric drill w/ clutch

Installation Time:

20 to 30 minutes

Concrete Required:

1.8 cu ft. per post

Note: Concrete must have a minimum rating of 2,500 psi and must be mixed per manufacturers recommendation.

This space intentionally left blank.

Standard Hardware

5/16" x 5"
RSS Stainless




5/16" x 4"
RSS Stainless

5/16" x 3-1/8"
RSS Stainless

5/16" x 2-1/2"
RSS Stainless

1/4" x 2-1/2"
RSS Stainless

#10 x 2-1/2"
R4 Stainless

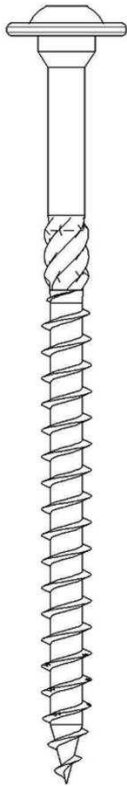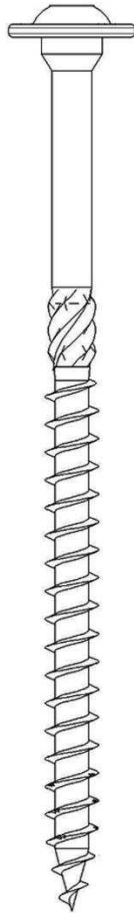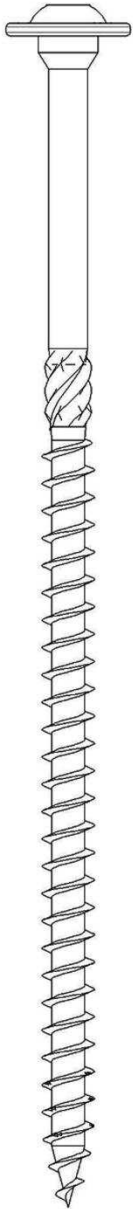

NOT TO SCALE!

Pre-Installation Check


Check off all items received, against the packing list. Notify your local sales representative immediately of any items that are missing or that may be damaged.

TERRABOUND IS NOT RESPONSIBLE
FOR ITEMS DISCOVERED MISSING
AFTER 72 HOURS FROM TIME OF
DELIVERY.

**PRE-DRILLING IS REQUIRED. ALL LOCATIONS WHERE
HARDWARE IS TO BE FASTENED REQUIRES PRE-
DRILLING TO ENSURE PROPER INSTALLATION AND
STRUCTURAL INTEGRITY. WE ARE NOT RESPONSIBLE
FOR INSTALLATION OR STRUCTURAL ISSUES THAT
ARISE FROM NOT PRE-DRILLING ATTACHMENTS.**


This space intentionally left blank.

Single Dog Crawl Assembly

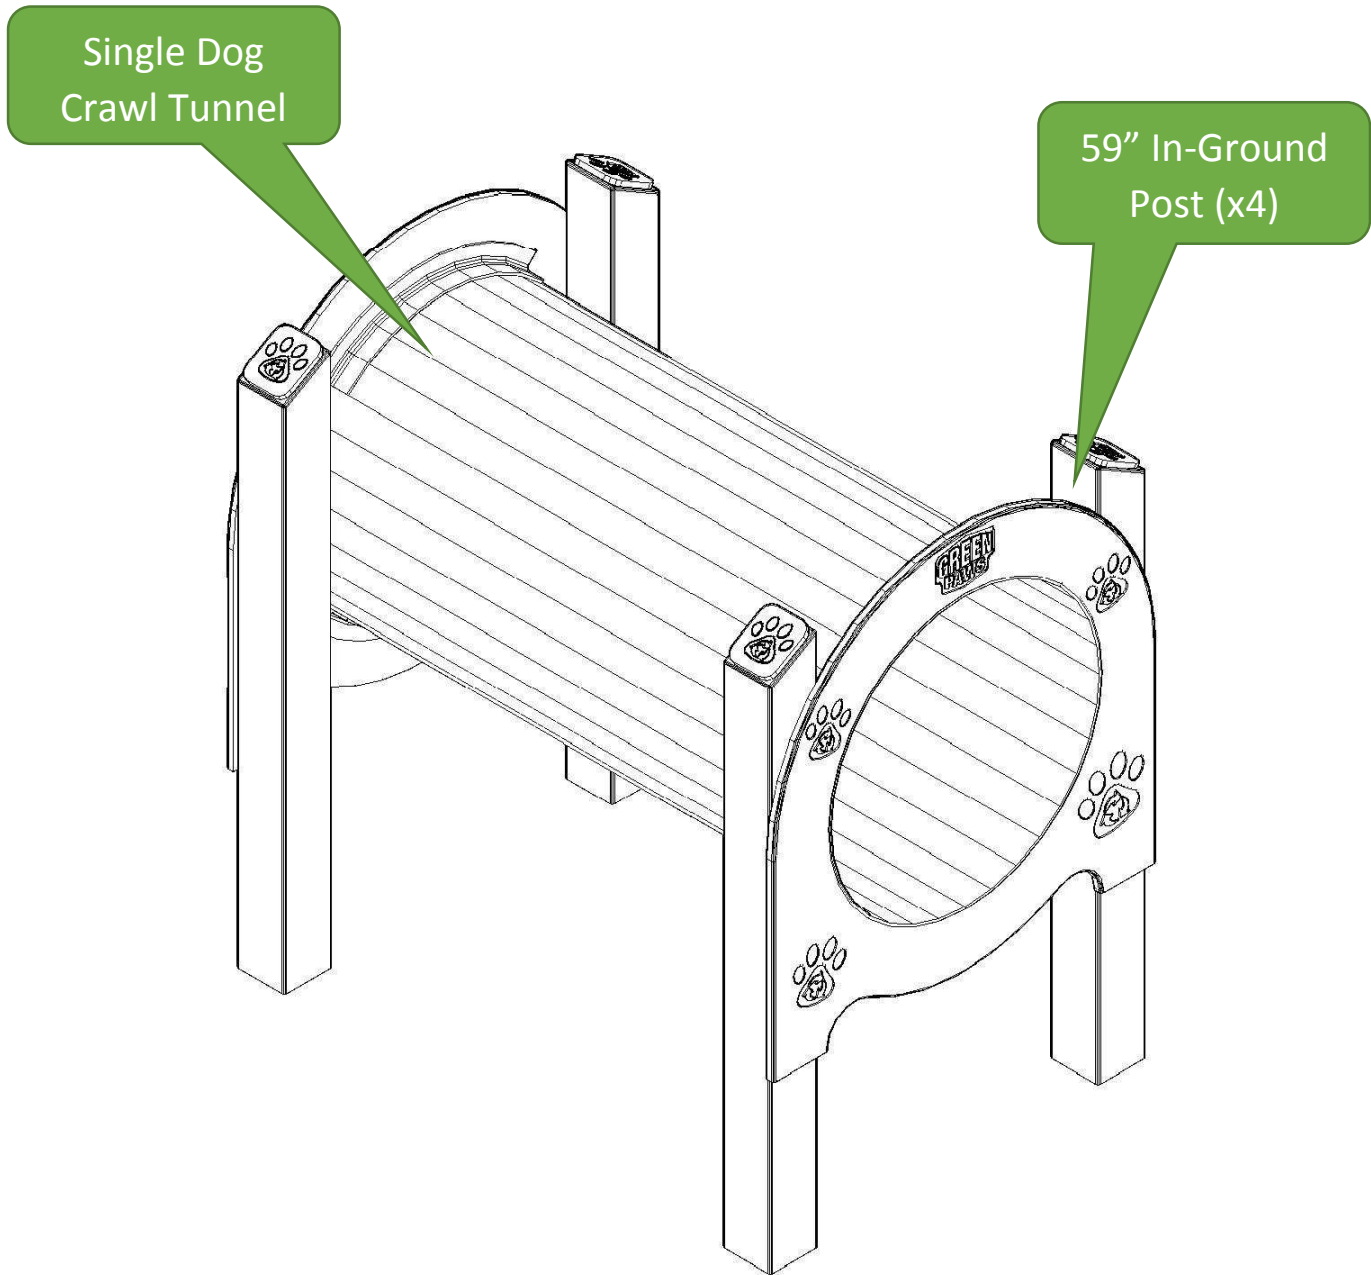

Single Dog Crawl Assembly (Contd.)

Please reference the footer drawing provided for the hole placement of the item(s) below. We recommend you dig your footer holes prior to the assembly of your equipment to aid in the ease of installation. Locate the Single Dog Crawl Tunnel (A) and the 59" Posts (B) and align them to the 4 inside corners(C) of Single Dog Crawl Tunnel.

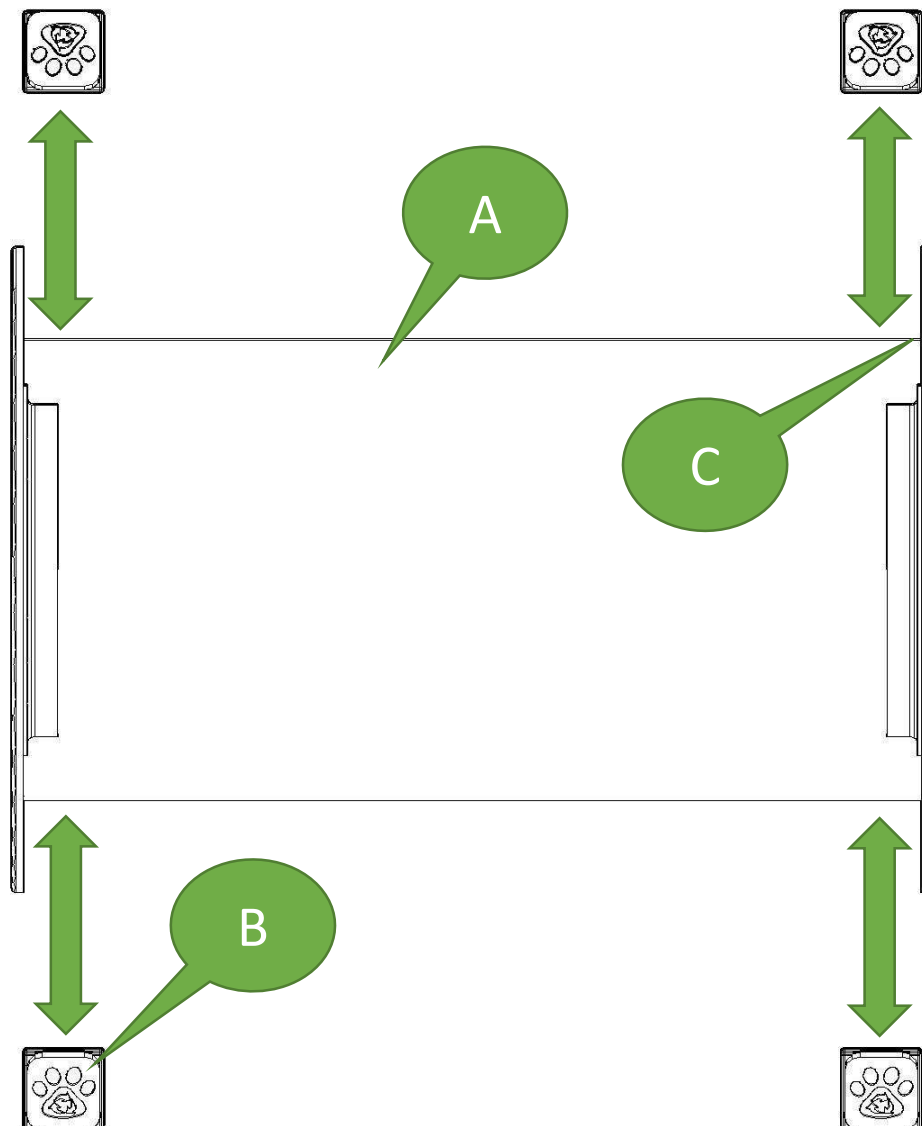

Single Dog Crawl Assembly (Contd.)

The positioning of the posts should be such that two sides of the post rest against the outside of the tunnel and the inside of the HDPE Panel as shown below.



While it's not crucial to the integrity of the installation, the angle of the posts cap tops needs to be noted before fastening the posts to the crawl tunnel for the overall aesthetic quality.

Single Dog Crawl Assembly (Contd.)

Once the posts are in place proceed to fasten (12) 5/16" x 2-1/2" RSS SS Screws (3 per side) in the pre-drilled locations shown below. The installation is now complete!

