



Nurturing Creativity Through Innovative Play™

217 Murphy Ave • Ferguson, Kentucky 42533

Phone: 606-485-4406 • **Fax:** 606-485-4407

Email: <u>info@goplaytopia.com</u> • **Web:** www.goplaytopia.com

Recommended Crew:

Minimum 1-2 People

Tools Required for Assembly:

T-30 TORX Bit

3/16" x 6" Drill Bit

Post Hole Digger / Shovel / Auger

Tape Measure

Level

High Speed 3/8" electric drill w/ clutch

Installation Time:

6 to 8 hours

Concrete Required:

1.8 cu ft. per post

Note: Concrete must have a minimum rating of 2,500 psi and must be mixed per manufacturers recommendation.


This space intentionally left blank

Standard Hardware

5/16" x 5" RSS Stainless 5/16" x 4" RSS Stainless 5/16" x 3-1/8" RSS Stainless 5/16" x 2-1/2" RSS Stainless 1/4" x 2-1/2" RSS Stainless

#10 x 2-1/2" R4 Stainless



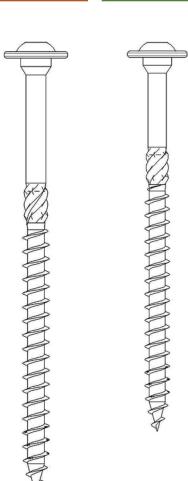







NOT TO SCALE!

Pre-Installation Check


Check off all items received, against the packing list. Notify your local sales representative immediately of any items that are missing or that may be damaged.

PLAYTOPIA, INC. IS NOT RESPONSIBLE FOR ITEMS DISCOVERED MISSING AFTER 72 HOURS FROM TIME OF DELIVERY.

PRE-DRILLING IS REQUIRED. ALL LOCATIONS WHERE HARDWARE IS TO BE FASTENED REQUIRES PRE-DRILLING TO ENSURE PROPER INSTALLATION AND STRUCTURAL INTEGRITY. WE ARE NOT RESPONSIBLE FOR INSTALLATION OR STRUCTURAL ISSUES THAT ARISE FROM NOT PRE-DRILLING ATTACHMENTS.


This space intentionally left blank.

Kennel Club Components (Standard Model)

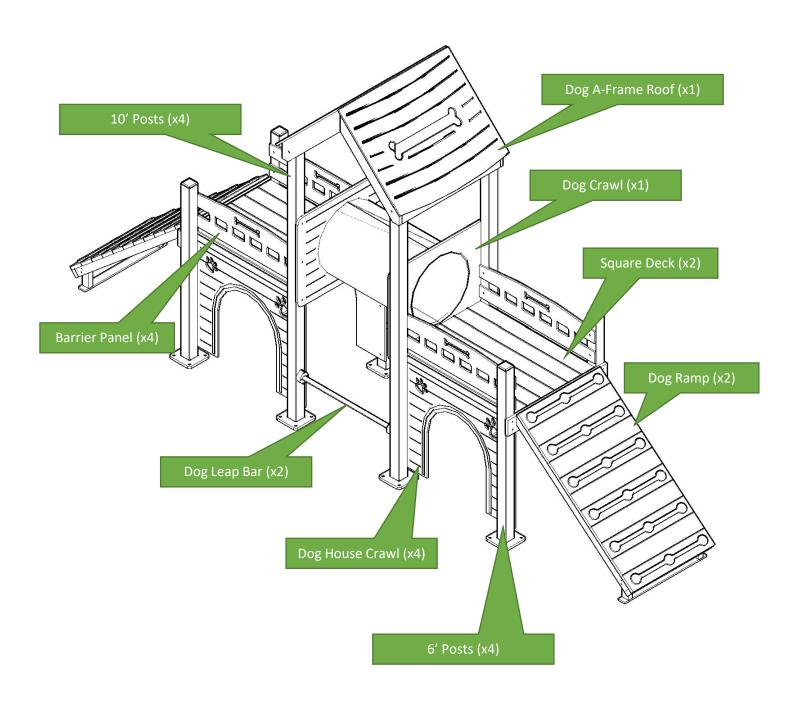

Kennel Club Post Footers


When beginning the Kennel Club assembly, use the footer reference below to mark where your post holes will be. The footer holes should be 12" in diameter by 16" deep with a 3" backfill. It is highly recommended the concrete not be set until the completion of the Kennel Club assembly.

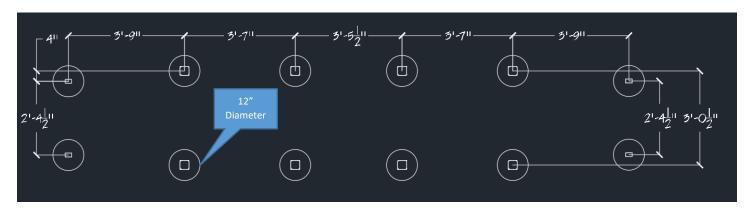




Kennel Club Deck Assembly

Once your posts are in dry fitted and placed in the footer holes, begin to install the Kennel Club deck platforms as shown below. The deck heights should be installed so that the tops of the deck surface should be 40" from the ground surface.

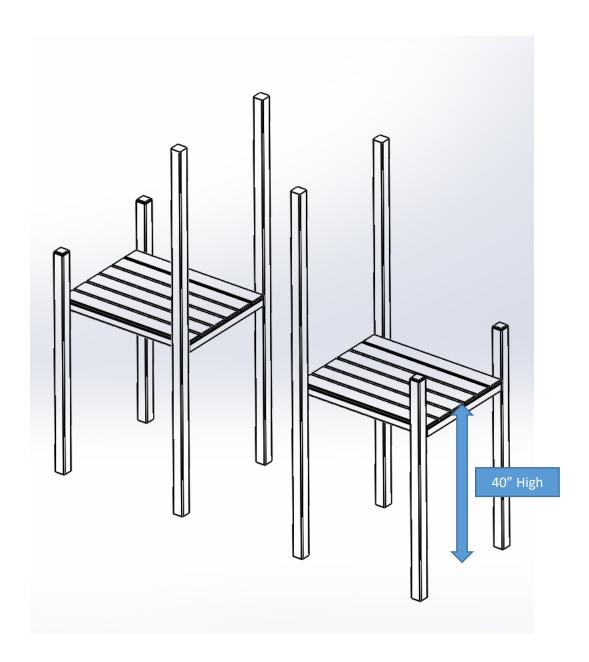


Kennel Club Deck Assembly (Contd.)


Supporting the deck from underneath, fasten the platform using (4) 5/16"x4" RSS screws (1 per corner) through the 2x3 deck frame and into the 4x4 post. Repeat the previous steps on the remaining deck platform.

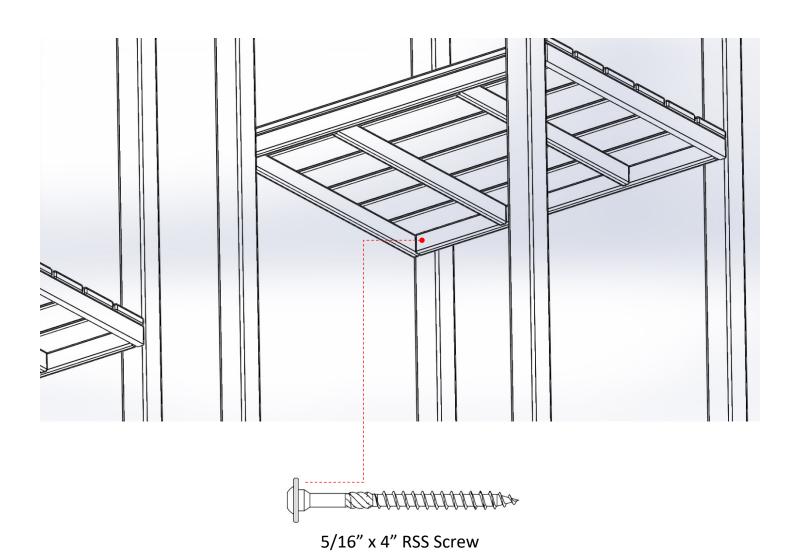

Kennel Club Panels Assembly


With the deck platforms in place proceed to fasten the Dog House Crawl panels to the 4x4 posts as shown below. The panels are placed behind the 4x4 posts so that the outside edges of the panels are flush with the outside edges of the 4x4 posts (A). The tops of the panels rest directly up against the underside of the deck platform frame (B).

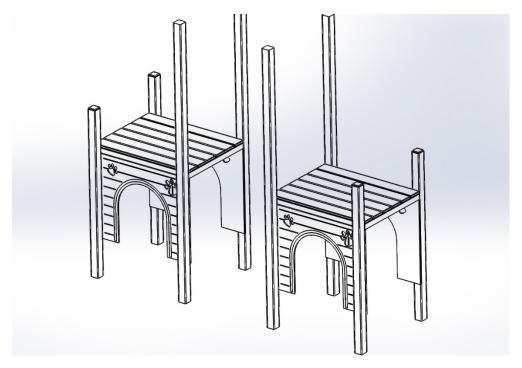

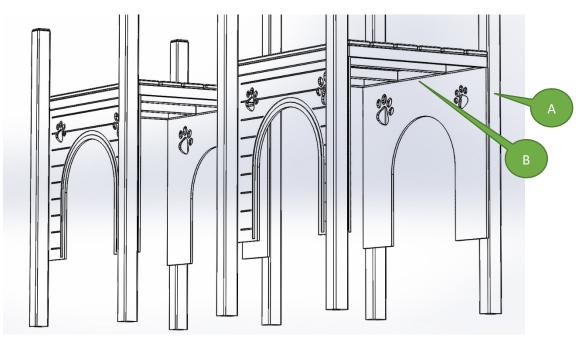

Kennel Club Panels Assembly (Contd.)


With the panels in place fasten (6) 5/16"x3" RSS Screws (3 per side) through the Dog House Crawl panel and into the 4x4 posts. Repeat the previous steps on the remaining 3 Dog House Crawl Panels until all are fastened in place.

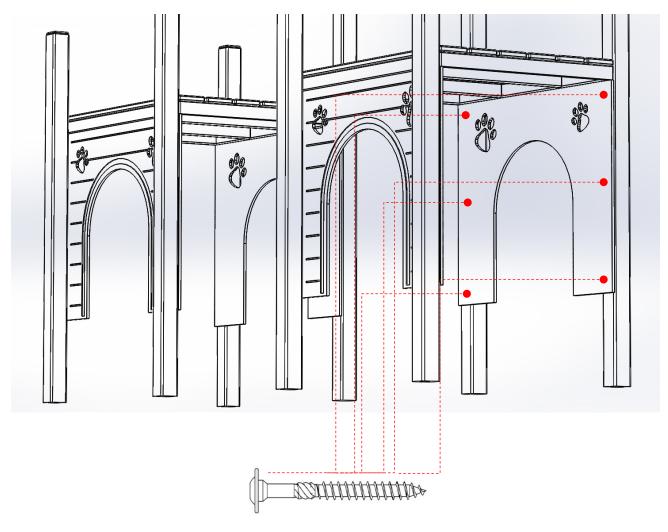

5/16" x 3" RSS Screw


Kennel Club Panels Assembly (Contd.)

Proceed to place the Dog Barrier panels in the locations as shown below. The bottoms of the barriers should be placed 1-1/2" to 2" above the surface of the deck platform. The outside edges of the panels (C) should align flush with the outside of the 4x4 posts. Once in place fasten (4) 5/16" x 3" RSS Screws (2 per side) through the barrier panel and into the post.

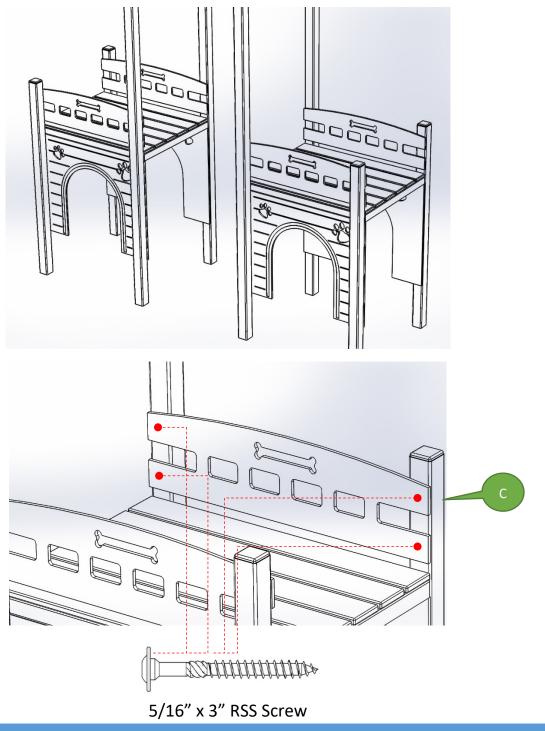

Kennel Club Tunnel Assembly


The 24" Diameter Crawl Tunnel is mounted directly to the 4x4 posts using (12) 5/16" x 3" RSS screws. Pre-drill through the panel plastic (D) and into the post then proceed to fasten one 5/16" x3" RSS screw, through the panel and into the post as shown below.

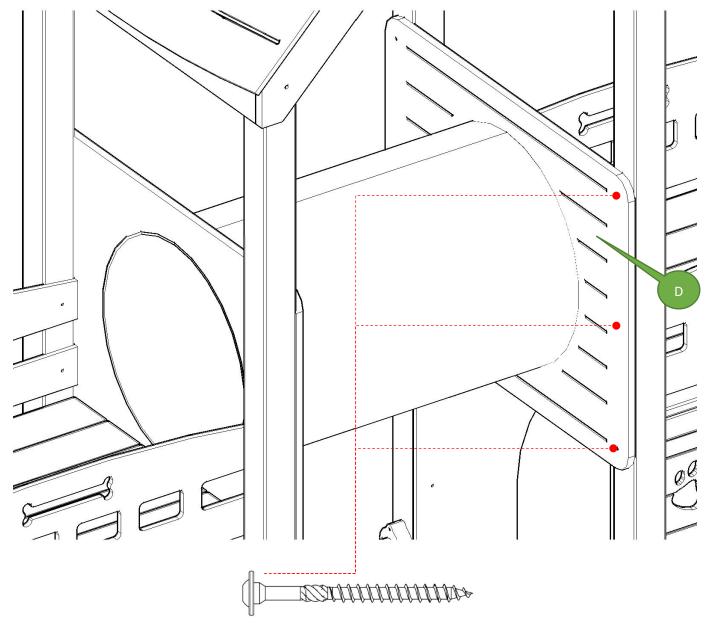

5/16" x 3" RSS Screw

Kennel Club Roof Assembly


Place the Dog Bone A-frame Roof on top of the (4) 12' posts. The roof should be installed so that the tops of the 4x4 posts align with the tops of the A-Frame roof side support (F). Ensure that it is level and plumb before proceeding to fasten in place.

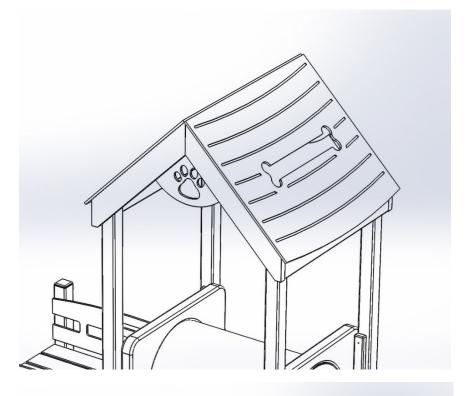



Kennel Club Roof Assembly (Contd.)


With the roof in place proceed to fasten (4) 5/16" x 3" RSS Screws (1 per side) through the predrilled holes shown below and into the 4x4 posts.

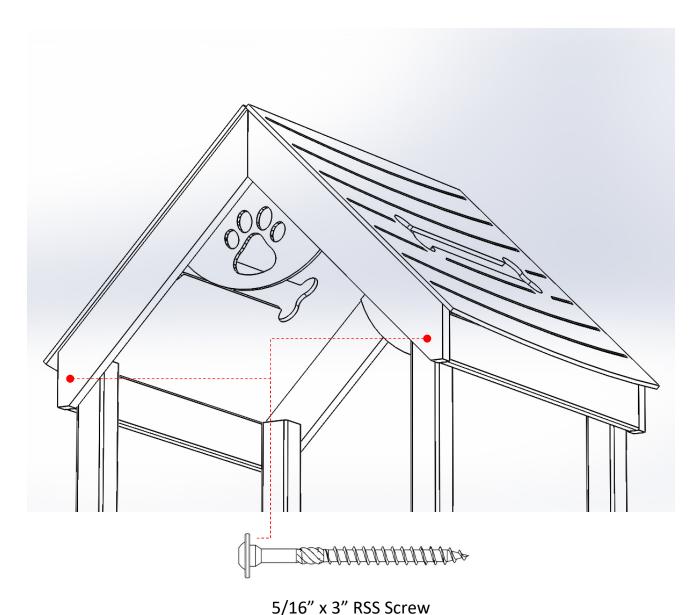

3/10 X 3 1133 3616 W


Kennel Club Leap Bar Assembly

The dog leap bars can be installed at the height preferred by the owner based on the agility level of the dog(s). The measurement below is a guide only and can be adjusted as necessary. The placement of the leap bars should be centered on to the 4x4 post.

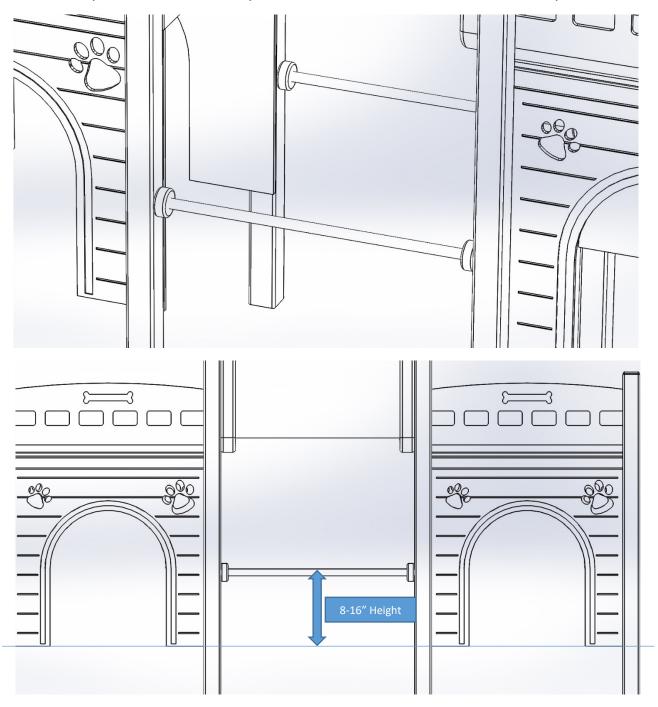

Kennel Club Leap Bar Assembly (Contd.)


Once leveled and at the preferred height, fasten the Leap Bars to the 4x4 posts using (4) 5/16" x 3" RSS Screw (2 per side) through the leap bar collar and into the 4x4 post.

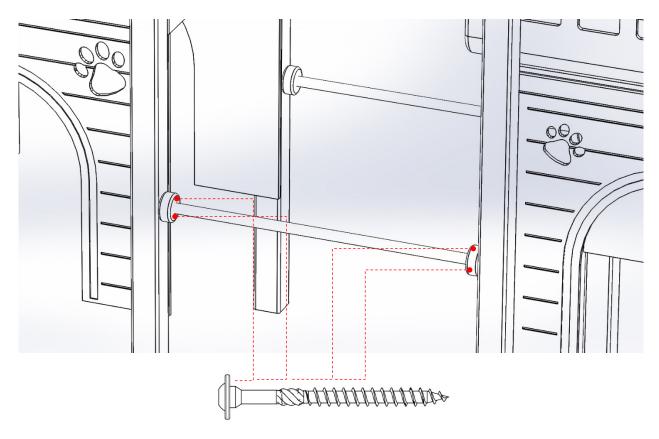

5/16" x 3" RSS Screw


Kennel Club Ramps Assembly

The final step is the ramp assembly. Locate the ramps and place them so that the ears of the mounting board (G) are flushed to the outside face of the 4x4's. The top of the mounting board (H) should be positioned flush with the top of the deck platform surface.

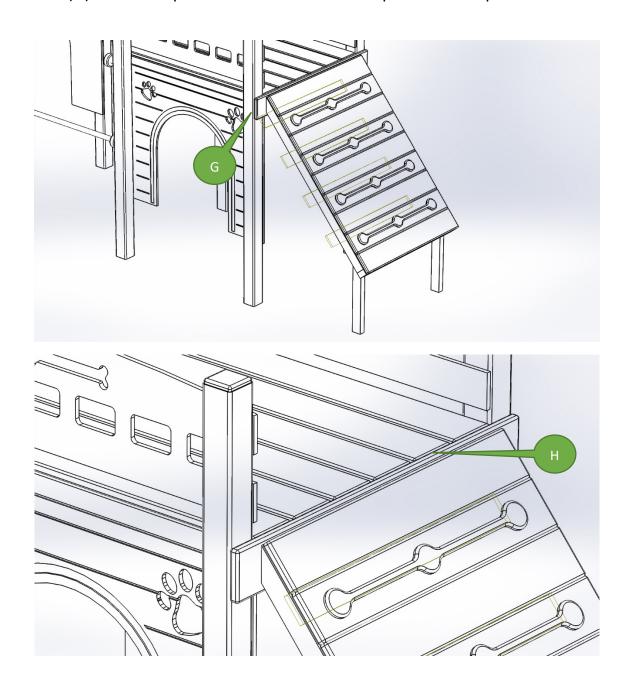

Kennel Club Ramps Assembly (Contd.)


With the ramp in the proper position and height fasten (4) 5/16" x 3" RSS screws (2 per side) through the mounting board and into the 4x4 posts. Repeat this step for the remaining ramp.

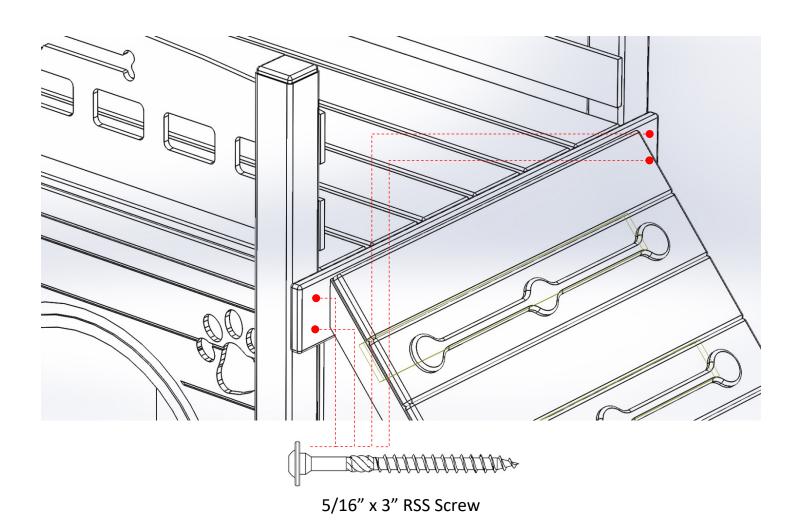

Kennel Club Ramps Assembly (Contd.)

With the ramp attached at the top, fasten the (2) 2x3 support legs to the inside support frame of the ramp as shown below. The 2x3 legs will also require a footer hole the same dimensional specifications as mentioned on page 5.


Fasten (4) 5/16" x 3" RSS screws (1 per leg) through the outside of the frame and into the 2x3 leg support. Repeat the same steps on the remaining ramp. (This also applies to surface mount legs)

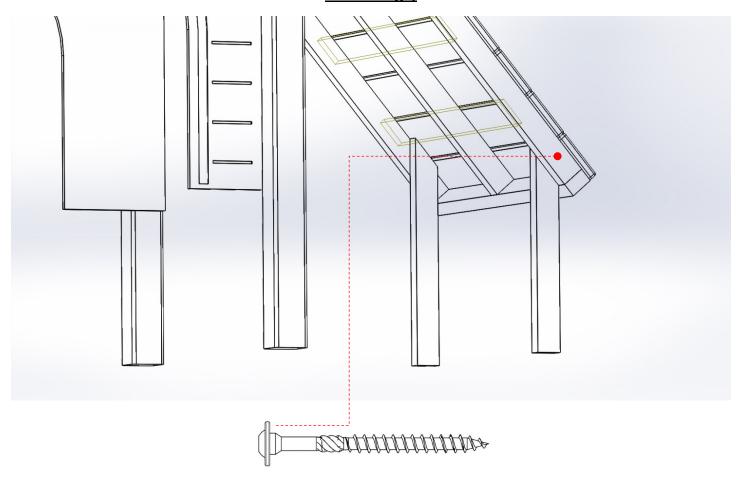


5/16" x 3" RSS Screw

Kennel Club Surface Mount Feet Assembly

If the Kennel Club model you have ordered is a Surface Mount option, please follow the assembly instructions below. NOTE: A SOLID and LEVEL surface is REQUIRED for proper surface mount installation. Mount holes (I) are included to allow anchoring to a concrete surface. Use of a 1/2" diameter Concrete Anchor or Wedge bolt is recommended.

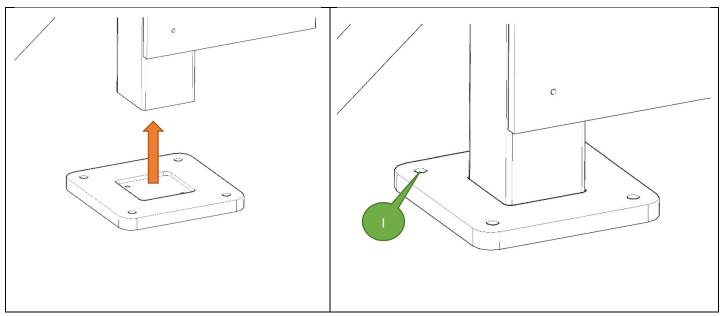

Place the surface mount pad on the bottom of the 4x4 post PRIOR to installation. When positioned, pre-drill through both hole locations on the underside of the pad and proceed to fasten (2) 5/16" x 3" screws through the pad and into the bottom of the 4x4 post.

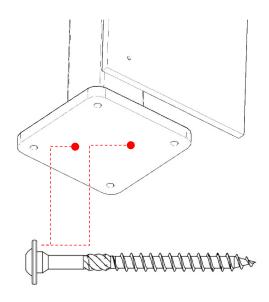

5/16" x 3" RSS Screw