

Radical Rotator Install

STEP: 1


Attach the in-ground mount support to center spinner mount using four (4) M10*35 bolts, four (8) M10 washers and four (4) M10 Lock Nuts.

Repeat for remaining connection points.



STEP: 2

Attach spinner handlebars to base of spinner using three (3) M8*25 bolts, six (6) M8 washers and three (3) M8 Lock Nuts. Repeat for remaining connection points.

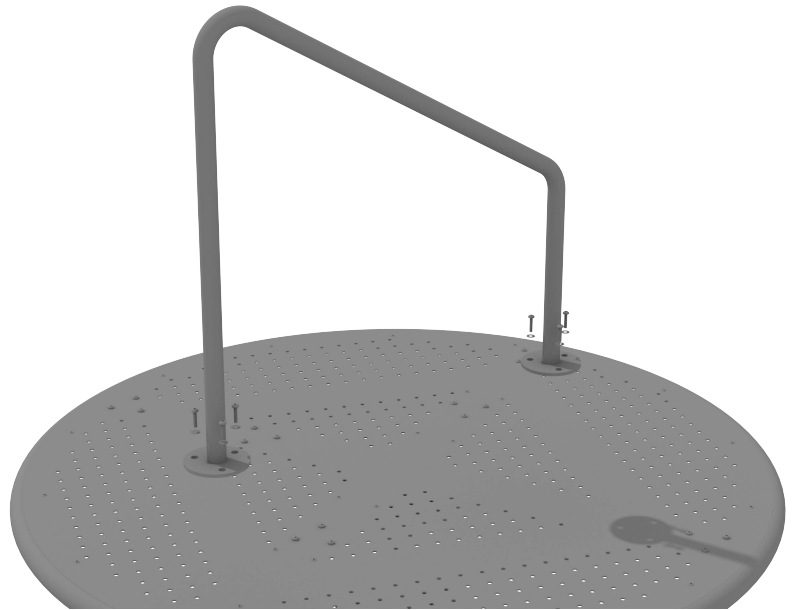

Radical Rotator Install

STEP: 3

Radical Rotator requires a 18" Wide x 18" Deep footing for each mount. The mounts are designed for use with 12" of safety surfacing, if less surfacing is being used footers should be dug deeper to accommodate the difference. The distance from the safety surface to the platform should be either greater than 9" OR less than 3.5"

