
# Handicap Accessible Picnic Table


For Fastener Pack (FP-SPT2HA-CU-03)

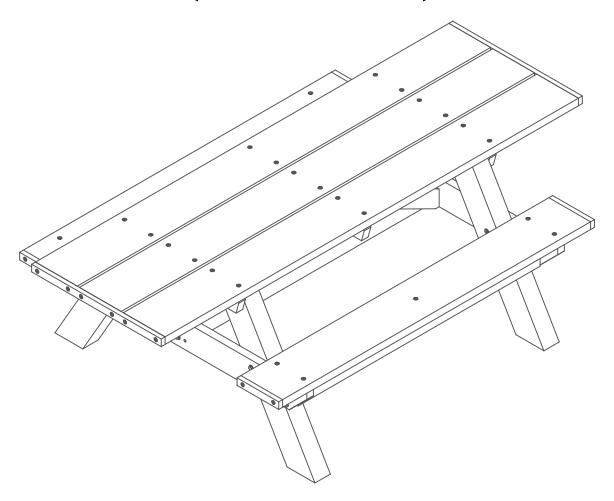


Congratulations!!


You have just purchased the finest recycled plastic picnic table available. Enjoy!!!

Before assembly, please check to make sure all components are included.

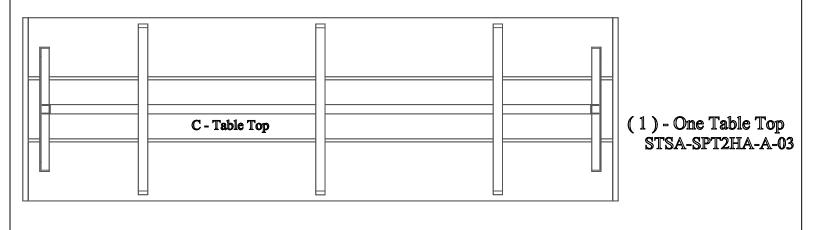


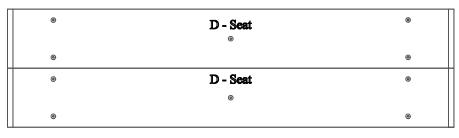

(2) - Two Seats STSA-S6H-A-02



(2) - Two Seat Cross Supports STP-S6H-C-02




(2) - Two Under Seat Supports STP-S6H-B-01

_		
	N - Angle Support	N - Angle Support

(2) - Two Angle Supports STP-DS6H-A-01



(1) - One Center Support STP-DS6H-D-01



(2) - Two Right Legs STP-DS-B-02



(2) - Two Left Legs STP-DS-A-02




(1) - One Fastener Pack FP-SPT2HA-CU-03

Before assembly, please check to make sure all fasteners are included.		
2 - 3/8" x 4" Hex Head Tap Bolt		
16 - 3/8" x 5" Hex Head Bolt		
8 - 3/8" x 3" Hex Head Lag Bolt		
5 - 3/8" x 2 1/2" Hex Head Lag Bolt		
46 - 3/8" Flat Washer 2 - 5/8" x 1" Cross Dowel		
16 - 3/8" Nylon Lock Nut		
10 - #12 x 3" Flat Head Phillips Screw		
Also needed for this assembly will be the following materials:  1 - #3 Phillips Drive Bit 2 - 9/16" Socket Wrench		

1 - 1/4" Flat Head Screwdriver


FS-SPT2HA-CAP-03

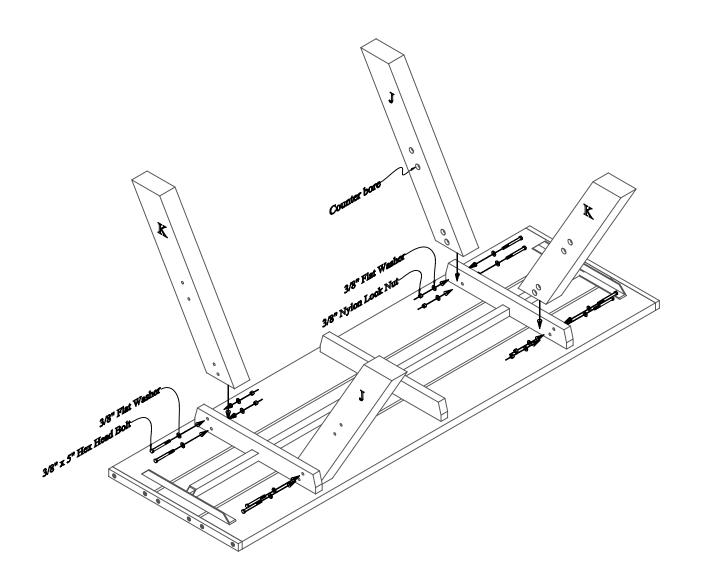

#### Step #1:

While the table top is upside-down, fasten the legs to the under top supports being sure that the counter bores are pointing toward the center of the table as shown above. Use (1) One 3/8" x 5" Hex Head Bolt along with (1) One 3/8" Flat Washer, secure with (1) One 3/8" Flat Washer and (1) 3/8" Nylon Lock Nut, per hole.


Note: Do not tighten bolts completely. This will be done in a later step.

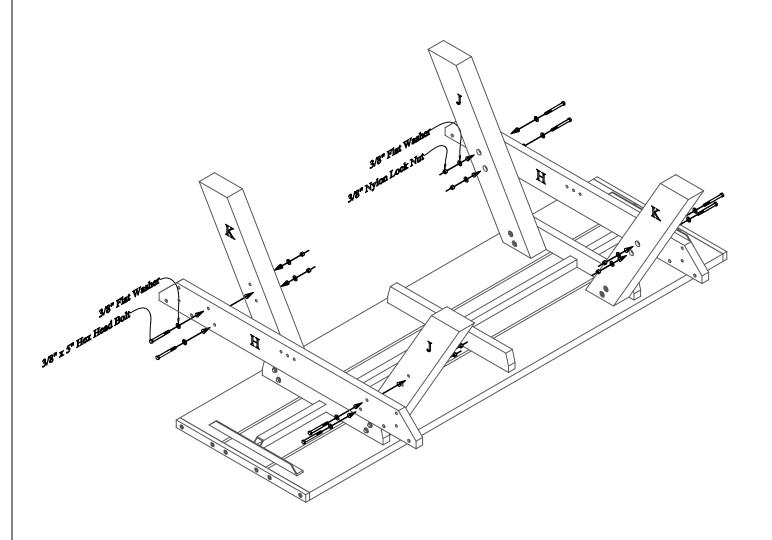

### Step #2:

While the table top is upside-down, fasten the seat cross supports to the legs. Use (1) One 3/8" x 5" Hex Head Bolt along with (1) One 3/8" Flat Washer, secure with (1) One 3/8" Flat Washer and (1) 3/8" Nylon Lock Nut, per hole.

Note: Do not tighten bolts completely. This will be done in a later step.

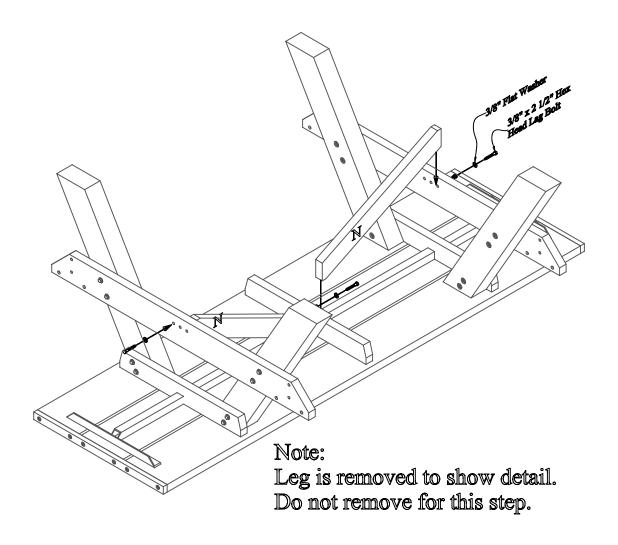


#### Step #3:

While the table top is upside-down, fasten the angle supports to the seat cross supports and the center top support. Use (1) One 3/8" x 2 1/2" Hex Head Lag Bolt and (1) One 3/8" Flat Washer per hole to secure.

Note: Be sure to tighten all loose bolts after this step is complete.


## Step #4:

Place (1) One 5/8" x 1" Cross Dowel in each hole of the Center Support as shown in the diagram below. You may need to tap the Cross Dowels in place. Be sure the score on the dowel head is in line with the length of the Center Support as shown below.

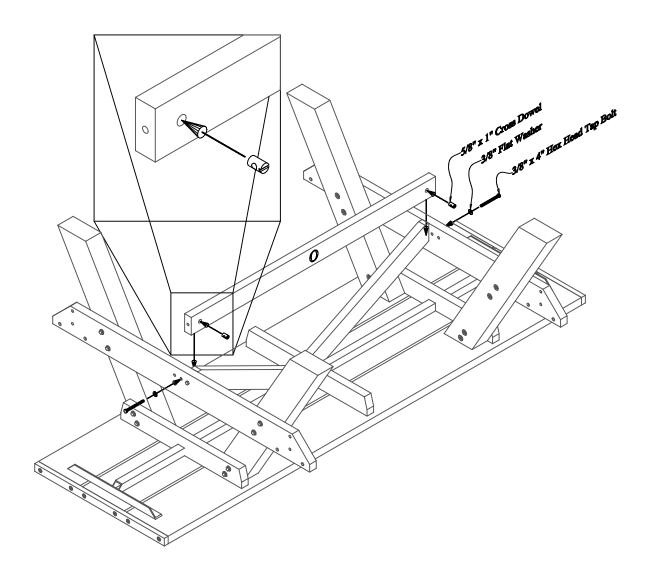


## Step #5:

While the table top is upside-down, fasten the center support to the seat cross supports. Use (1) One 3/8" x 4" Hex Head Tap Bolt and (1) One 3/8" Flat Washer per hole to secure.

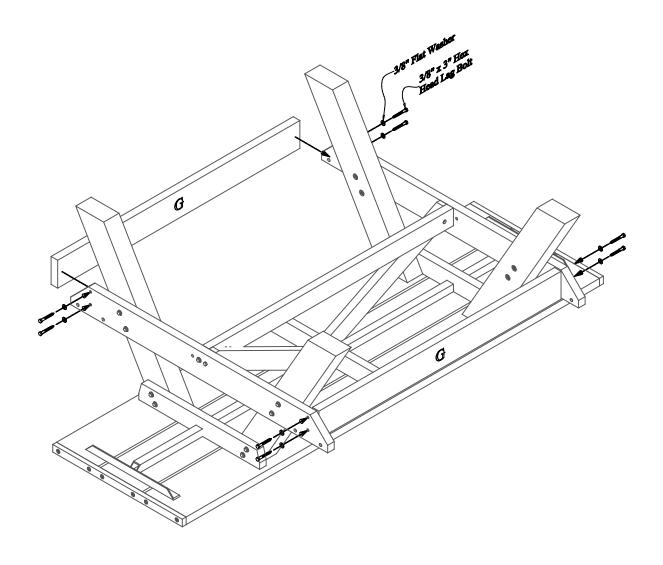


## Step #6:

While the table top is upside-down, fasten the under seat supports to the seat cross supports. Use (1) One 3/8" x 3" Hex Head Lag Bolt and (1) One 3/8" Flat Washer per hole to secure.

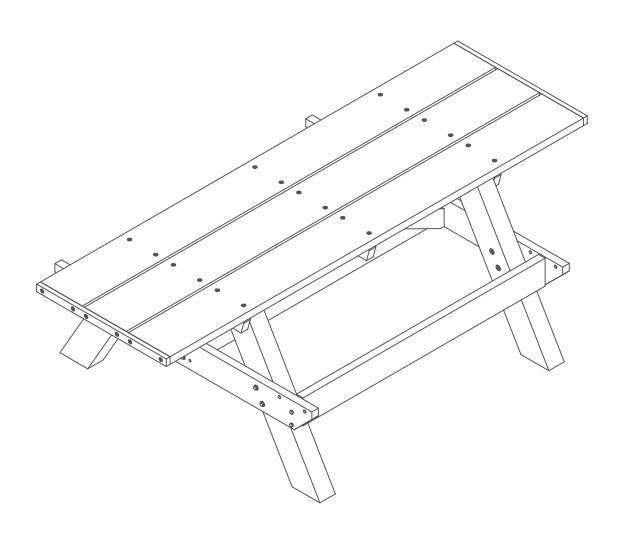

## Step #7:

Flip the table upright onto the legs. Please take caution while flipping the table. At this point in assembly the table weighs approximately 290 Pounds.

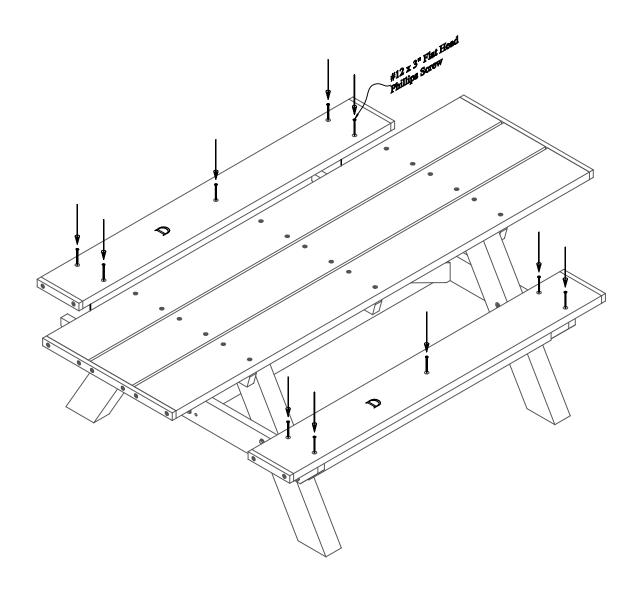

# Step #8:

While the table is upright fasten the seats to the seat cross supports and under seat supports being sure to center all holes over boards. Use (1) One #12 x 3" Flat Head Phillips Screw per hole to secure.