# T46WEBOCT-2SM


46" OCTAGONAL WEB STYLE 2 SEAT PEDESTAL TABLE SURFACE MOUNT DESIGN




Please take the time to locate and identify each part. Assemble the units on a smooth flat surface. It is also helpful to lay the tops and seats on cardboard or a drop cloth to prevent scratching of the surface during assembly. All parts have been pre—cut and pre—drilled for ease of assembly. All holes are slotted to allow for easy assembly and for final levelling of tops and seats to frames. Fully assemble all parts without totally tightening nuts and bolts. After all assembled go back and retighten nuts to bolts. DO NOT OVER TIGHTEN NUTS TO BOLTS. Over tightened nuts can crack the plastisol coating. All the necessary quantities of parts required are listed in this assembly instructions.

DO NOT BEGIN ASSEMBLY UNTIL YOU HAVE READ THESE INSTRUCTIONS AND ARE FAMILIAR WITH THE PARTS.


### PARTS IDENTIFICATION

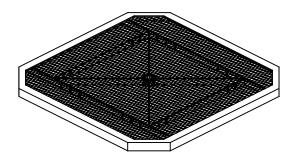


(A) 46" OCT TOP

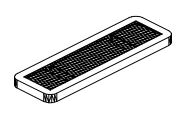

(B) 38" RC SEAT

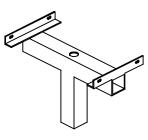

(C) CENTER POST

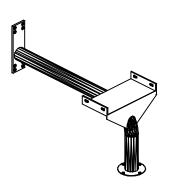

(D) PEDESTAL ARMS


### PARTS LIST

PART#	DESCRIPTION	QTY
TT460CT	46" OCT TOP	1
S38RC	38" RC SEAT	2
F46PEDCP	CENTER POST	1
F46WEBARMSM	PEDESTAL ARM WEB	2
	PART# TT460CT S38RC F46PEDCP F46WEBARMSM	TT460CT 46" OCT TOP S36RC 38" RC SEAT F46PEDCP CENTER POST

ITEM	HARDWARE DESCRIPTION	QTY.
TIEM	HANDWAKE DESCRIPTION	AII.
HW1	5/16" X 18 NYL LOCKNUTS	12
HW2	5/16" X 18GA CAP BOLTS	12
HW3	5/16" FLAT WASHERS	24
HW4	BOLT GUARDS	12
HW5	5/8" BOLTS	4
HW6	5/8" NUTS	4

ASSEMBLY TOOLS REQUIRED 2- 1/2" WRENCHES

## **HARDWARE IDENTIFICATION**

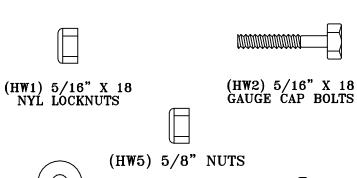

(HW3) 5/16" FLAT WASHERS



(HW4) BOLT GUÁRDS

(HW6) 5/8" BOLTS

### ASSEMBLY PROCEDURES

#### STEP 1

BOLT THE FOUR ARMS TO THE CENTER POST USING EIGHT 5/8" BOLTS AND EIGHT 5/8" NUTS, Hand tighten at this time.

#### STEP 2

SET THE TOP ON THE CENTER POST ALIGNING HOLES IN TOP BRACES WITH HOLES IN THE ANGLE IRON ON CENTER POST. FASTEN WITH FOUR 5/16" BOLTS, EIGHT WASHERS AND FOUR 5/16" NUTS. Hand tighten at this time.

#### STEP 3

SET SEATS ON THE SEAT BRACKETS OF THE ARMS. BRACES ON SEAT SHOULD SET TO THE OUTSIDE OF THE SEAT BRACKET ON THE ARM. FASTEN WITH FOUR 5/16" BOLTS, EIGHT WASHERS AND FOUR 5/16" NUTS PER SEAT.


#### STEP 4


TIGHTEN ALL BOLTS LEVELING AND SLIGNING PARTS AS YOU GO. DO NOT OVER TIGHTEN AS THIS WILL CAUSE THE PLASTISOL COATING TO CRACK.

#### STEP 5

ATTACH TO A SMOOTH LEVEL SURFACE. SURFACE MOUNTING HARDWARE NOT INCLUDED.

1	CAP	BOLT	&	WAS	HER
2	WASH	HER 8	k L	OCK	NUT

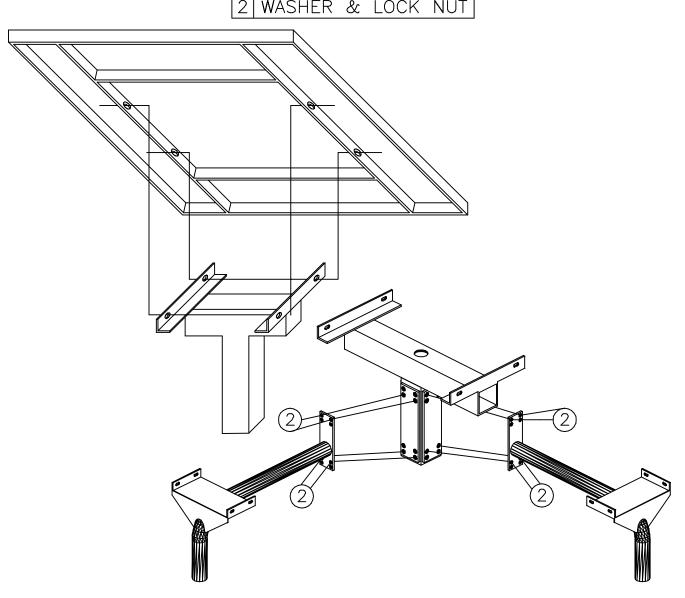

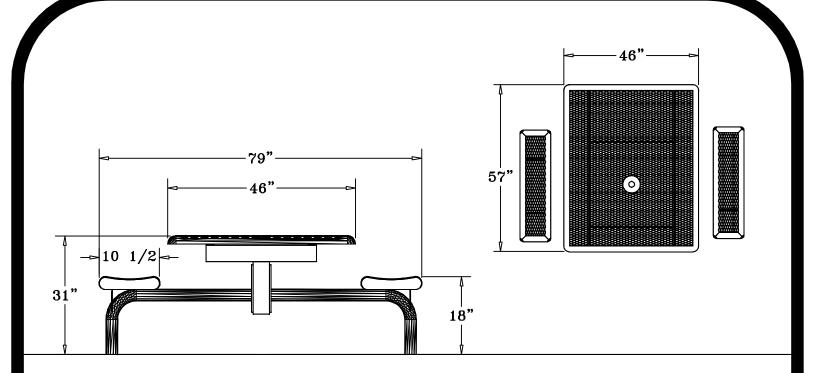

### **SPECIFICATIONS**

46" OCTAGONAL TABLE WITH TWO ATTACHED 38" X 10 1/2" SEATS. FRAME IS SURFACE MOUNT DESIGN.

COATED WITH A 1/8" TO 1/4" THICK PLASTISOL ULTRAVIOLET STABILIZED VINYL COATING FUSED AND BAKED TO A 90% GLOSS.

TABLE HEIGHT IS 31" APPROXIMATELY. SEAT HEIGHT IS 18" APPROXIMATELY. TOTAL OVERALL DIMENSION IS 79" X 57" APPROXIMATELY.

TOP AND SEATS ARE MADE WITH HEAVY DUTY 3/4" #9 EXPANDED METAL INSIDE OF A 2" X 2" X 1/8" ANGLE IRON FRAME.

FRAME IS A SINGLE 4" X 4" PEDESTAL MOUNTED TO THE CENTER OF THE TABLE TOP. EXTENDING OUT FROM THE 4" SQUARE TUBING ARE TWO 2 7/8" ROUND TUBING ARMS THAT THE SEATS ARE MOUNTED TO. COATED WITH A BAKED ON POLYESTER POWDER COAT FINISH.

ALL HARDWARE IS NON-CORROSIVE.

WEIGHT FOR THE T46WEBOCT-2SM IS 198 LBS.

### **MAINTENANCE**

To maintain luster it is recommended to wash, rinse, and dry the units after prolonged use. Check for loose bolts and nuts and tighten as needed. Contact the factory for genuine Webcoat part replacements if needed.