


# TERRA BOUND SOLUTIONS™

20020 Hickory Twig Way, Spring, TX 77388 | Toll Free: 1-877-857-2915 | [www.terraboundsolutions.com](http://www.terraboundsolutions.com)

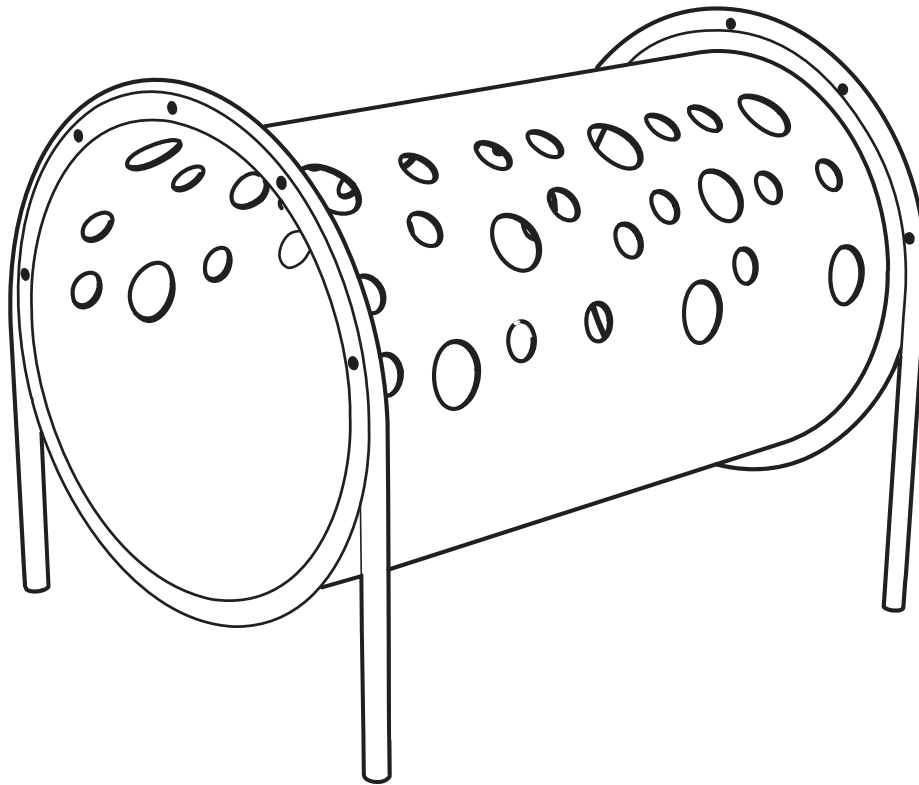



**MODEL # 02-07-0057**

# ***Crawl Tunnel***

**ASSEMBLY INSTRUCTIONS**

## MOUNTING OPTION 1

### Footing Detail for Installations Placed on Ground Level

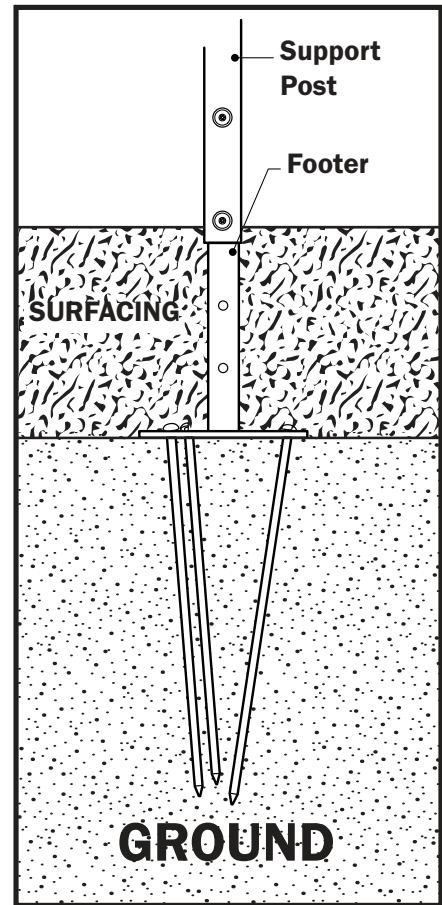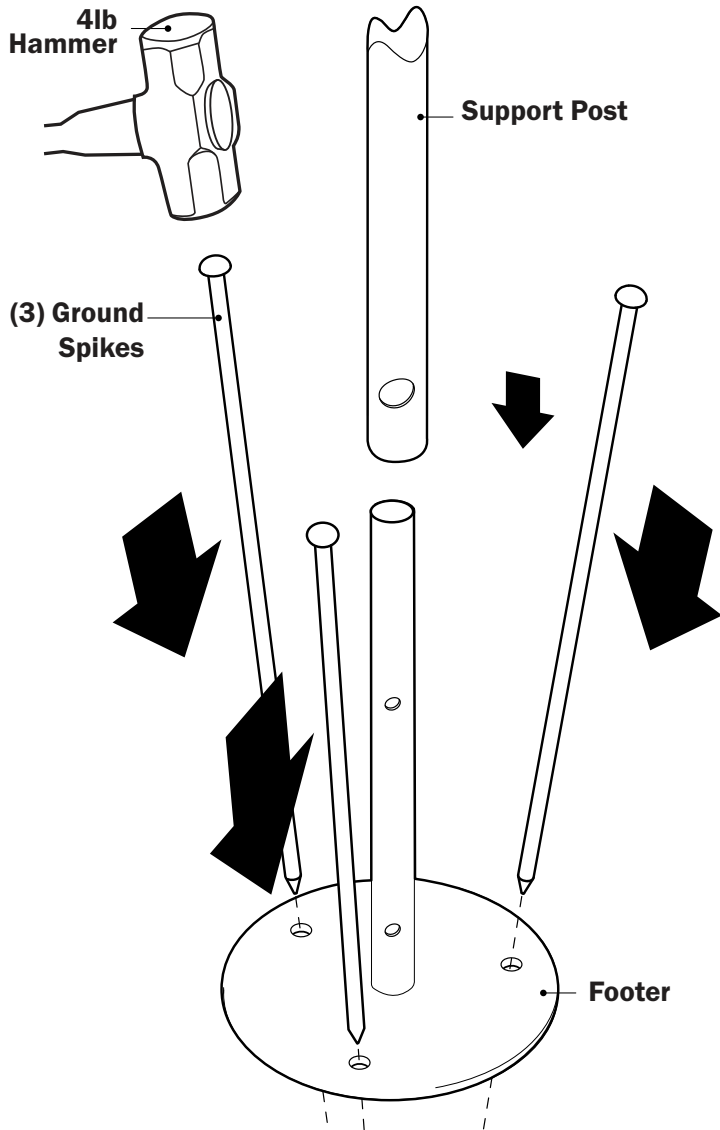

#### Instructions:


1. With Footers in position, secure each footer to the ground using (3) ground spikes.

NOTE: A 4 lb. hammer may be required to drive spikes into the ground.

**IMPORTANT:** Never install play equipment over hard, unresilient surfaces such as asphalt, concrete or compacted earth. It is the owner's responsibility to ensure the "minimum area required" contains an appropriate amount of resilient material to cushion accidental falls.



**Install ground spikes angled inward as shown in illustration.**


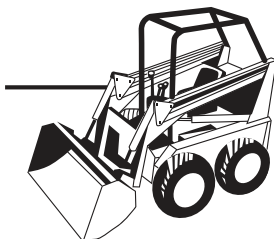


## SITE PREPARATION

**Clear area of any debris and grade to level surface to +/- 2°**

## MOUNTING OPTION 2

### Footing Detail for Installations Requiring Concrete Footers

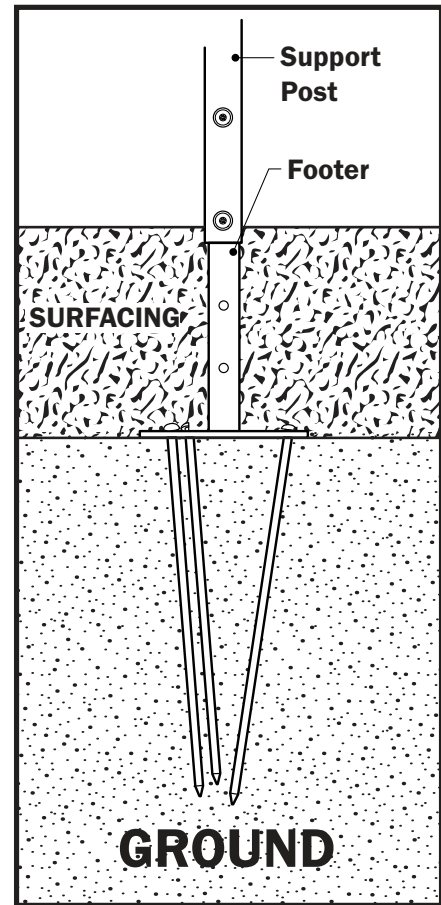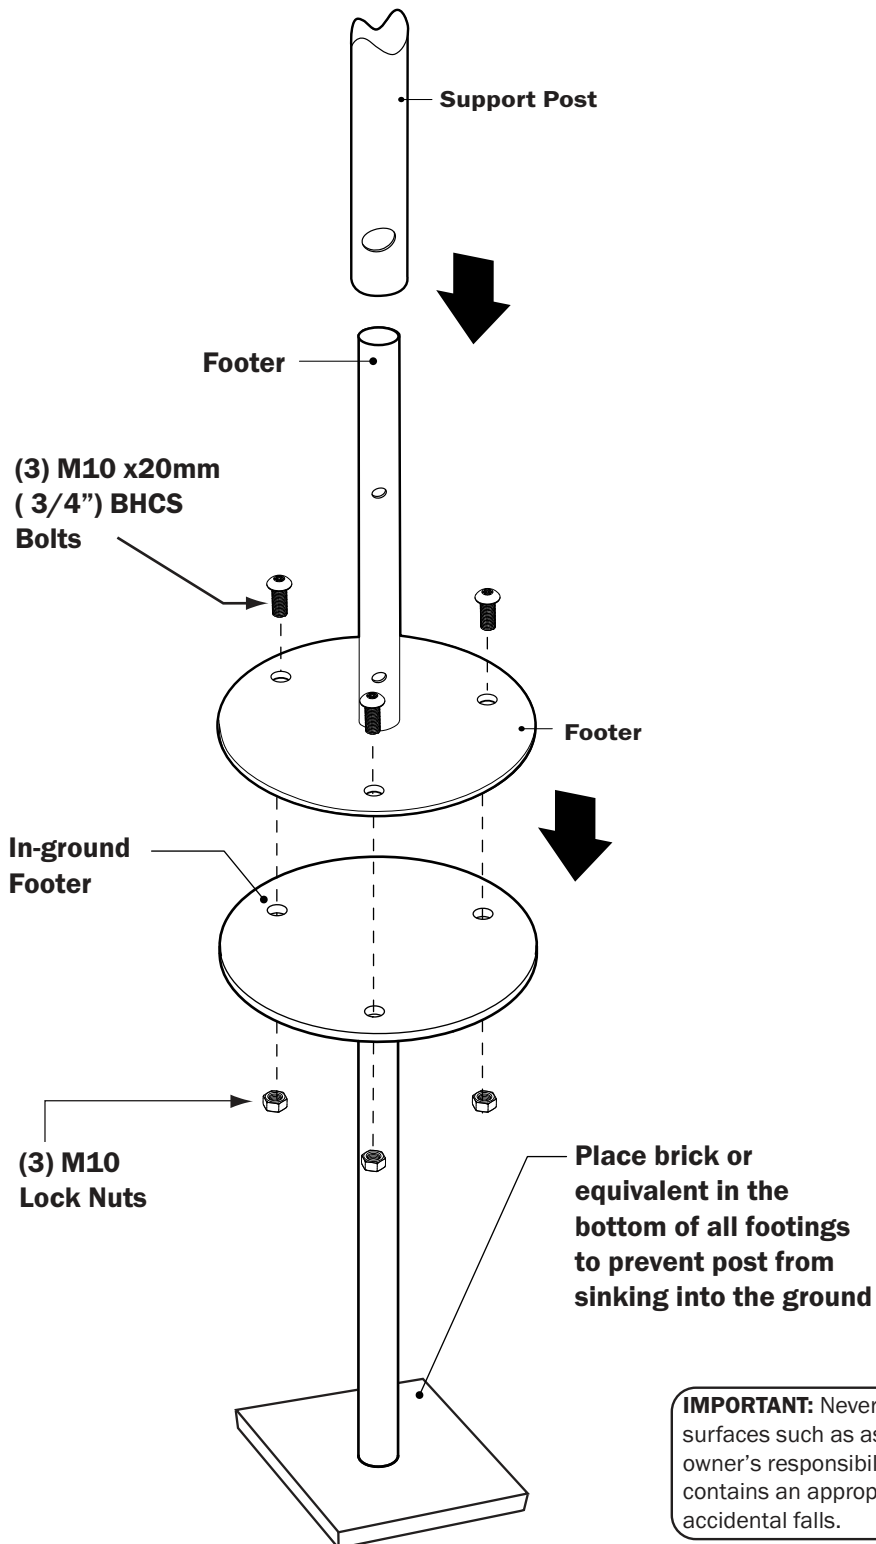

#### Instructions:

1. Bolt Footer and Inground Footer together using (3)M10 x 20mm(3/4") BHCS Bolts, and M10 Lock Nuts.

**IMPORTANT:** Never install play equipment over hard, unresilient surfaces such as asphalt, concrete or compacted earth. It is the owner's responsibility to ensure the "minimum area required" contains an appropriate amount of resilient material to cushion accidental falls.

# ATTACH FOOTER POSTS TO CRAWL TUNNEL AND FOOTERS

1. Lower U-shaped Support Post(B) behind flange of Crawl Tunnel(A).
2. Insert Bolt(D) through center hole in Crawl Tunnel(A), into Support Post(B) and secure with Barrel Nut(E).

**NOTE: Lightly tighten Bolts(D) until all Bolts(D) have been inserted.**

3. Repeat Step 2 for remaining Bolts(D).

4. Align hole in Support Post(B) with hole in Footer(C).


**NOTE: Use UPPER hole if using EWF (Engineered Wood Fiber)**

**Use LOWER hole if using 2" rubber tiles or poured-in-place surfacing.**

5. Insert Bolt(F) through larger hole in Support Post(B), into Footer(C) and through the other side of Support Post(B) and secure with Lock Nut(G). See Figure 1.

6. Repeat steps 4-5 for Remaining Footers(C).


Parts List			
Letter	Description	Quantity	Part Number
A	Crawl Tunnel	1	02-07-0057
B	Support Post	2	02-07-0087
C	Footer	4	02-07-0043
	<b>Hardware Complete</b>	1	33-12-0058
D	M8 x 25 BHCS Bolt	10	33-11-0103
E	M8 Barrel Nut	10	33-11-0501
F	M10 x 35 BHCS Bolt	4	33-11-0005
G	M10 Lock Nut	4	33-11-0400

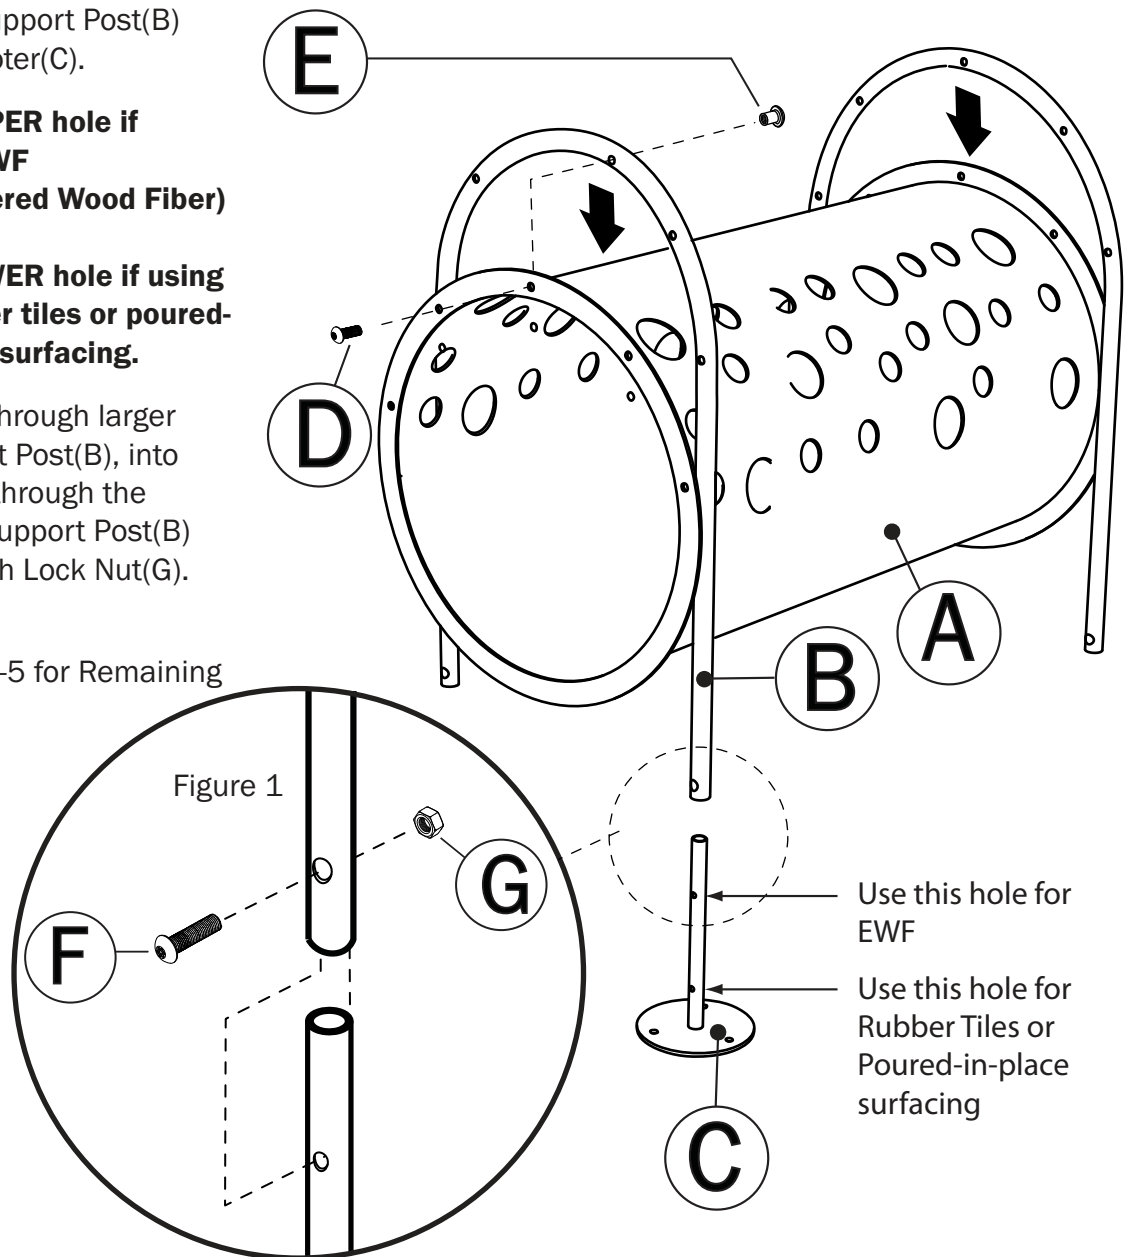

# SECURE CRAWL TUNNEL TO GROUND

## ABOVE GROUND INSTALLATION


For Above Ground installation using Ground Spikes(A), refer to Mounting Option 1 on page 2.

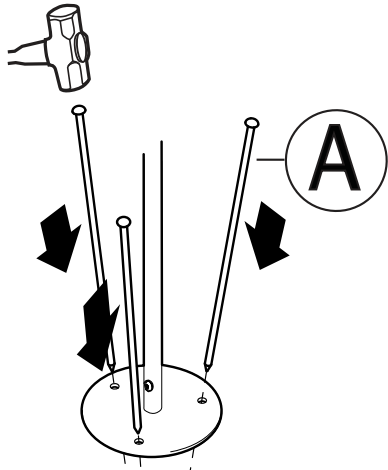

or

## IN-GROUND INSTALLATION

For In-Ground installation using the In-ground Footer(B), refer to Mounting Option 2 on pages 3 and 4.

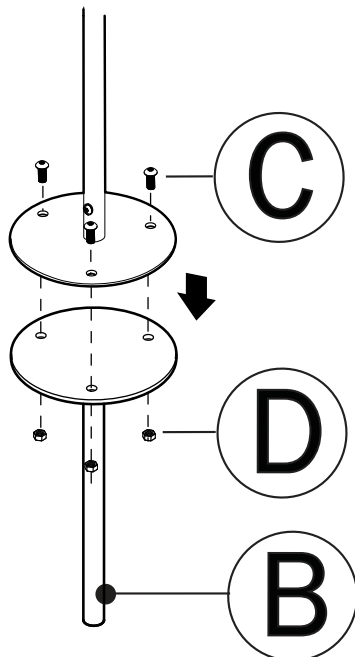

Parts List			
Letter	Description	Quantity	Part Number
A	Ground Spikes	12	02-07-0048
B	In-Ground Footer	4	02-07-0049
	<b>Hardware Complete</b>	1	33-12-0058
C	M10 x 20 BHCS Bolt	12	33-11-0002
D	M10 Lock Nut	12	33-11-0400

